



ATECC608B-LoRaWAN

ATECC608B-TNGLoRaWAN CryptoAuthentication™ Data Sheet

Introduction

The ATECC608B-TNGLoRaWAN secure element is a pre-provisioned variant of the ATECC608B. The ATECC608B provides enhanced security measures over that of the ATECC608A. These enhancements also apply to the ATECC608B-TNGLoRaWAN. The Trust&GO secure element is part of Microchip's family of generically provisioned security-focused devices. The device configuration was designed to simplify implementing security on Low-Power Long Range LoRa® networks. Key partnerships with The Things Industry (TTI) and Actility allow customers to easily add security to their LoRaWAN™ connected network nodes.

This data sheet provides the slot and key configuration information that is unique to the ATECC608B-TNGLoRaWAN. This information clearly defines the access policies of each of the data zone slots. Only relevant command and I/O operating information has been included. An application section discussing Microchip's hardware and software tools that can aid in developing an application is also provided with additional links to the location of the tools.

Features

- Fully Specified Configuration Zone
- I²C Interface with One-Time Changeable I²C Address
- Compatible with LoRaWAN 1.1 and 1.0 Specifications
- Diversified Network and Application Parent Keys Used to Generate LoRa Session Keys
- IEEE - Extended Unique Identifier (EUI-64) for LoRaWAN Networks is supported
- LoRaWAN Over The Air Activation (OTAA) Support
- Support for TTI Join Servers
- Support for Actility ThingPark™ Wireless Platform
- Key Slots for Derived Session Keys Based on Diversified Parent Keys Including:
 - Application/Network session keys
 - Network/Server integrity keys
 - Network/Server encryption keys
- Repersonalization Key for Reassigning LoRaWAN Device Network Association
- Elliptic-Curve Cryptography (ECC secp256r1) Private Key for Elliptic-Curve Diffie-Hellman (ECDH) and External Signs
- Storage Slot for ECC Public Key and Compressed Certificates
- I/O Protection Key for Encrypting Data Transfers
- Available in 8-Pad UDFN and 8-Pin SOIC Packages in 2k or 100 Unit Production Quantities and 10 unit prototype sample quantities.

Applications

- Secure Communication with LoRa Sensor and IoT Nodes
- Security Support for Smart Homes/Cities that are Implemented using LoRaWAN

Table of Contents

Introduction.....	1
Features.....	1
Applications.....	1
1. Pin Configuration and Pinouts.....	5
2. EEPROM Memory and Data Zone Access Policies.....	6
2.1. ATECC608B-TNGLoRaWAN Configuration Zone.....	7
2.1.1. Modifiable Configuration Zone Bytes.....	7
2.2. Data Zone and Access Policies.....	8
2.2.1. Data Zone Data Types.....	8
2.2.1.1. AES Key Storage.....	8
2.2.1.2. IEEE EUI-64 Identifier.....	8
2.2.1.3. Repersonalization Key.....	9
2.2.1.4. Nonce Values.....	9
2.2.1.5. Private Keys.....	9
2.2.1.6. ECC Public Keys.....	10
2.2.1.7. Certificates Dynamic Storage.....	10
2.2.1.8. I/O Protection Key.....	11
2.2.1.9. General Data Storage.....	11
2.2.2. Slot Configuration Terminology.....	11
2.2.3. ATECC608B-TNGLoRaWAN Slot Configuration Summary.....	12
2.2.4. ATECC608B-TNGLoRaWAN Detailed Slot Access Policies.....	13
2.3. ATECC608B-TNGLoRaWAN EEPROM One-Time Programmable (OTP) Zone.....	18
3. Static RAM (SRAM) Memory.....	19
4. General Command Information.....	20
4.1. I/O Transactions.....	20
4.2. Command Packets.....	20
4.3. Status/Error Codes.....	21
4.4. Address Encoding.....	22
4.4.1. Configuration Zone Addressing.....	22
4.4.2. OTP Zone Addressing.....	22
4.4.3. DataZone Addressing.....	23
4.5. Formatting of Keys, Signatures and Certificates.....	24
4.5.1. ECC Key Formatting.....	24
4.5.1.1. Public Key Formats.....	24
4.5.2. Signature Format.....	25
4.5.3. Certificate Storage.....	25
5. Device Commands.....	27
5.1. General Device Commands.....	28
5.1.1. Counter Command.....	28
5.1.2. Info Command.....	29
5.1.2.1. Info - Revision.....	29

5.1.2.2.	Info - Device State.....	29
5.1.3.	Lock Command.....	30
5.1.3.1.	SlotLock.....	30
5.1.4.	Nonce Command.....	31
5.1.4.1.	Nonce - Random.....	31
5.1.4.2.	Nonce - Fixed.....	32
5.1.5.	Random Command.....	32
5.1.6.	Read Command.....	32
5.1.6.1.	Clear Text Read.....	33
5.1.6.2.	Encrypted Read.....	33
5.1.7.	SelfTest Command.....	34
5.1.8.	SHA Command.....	34
5.1.8.1.	SHA - SHA256 Digest.....	35
5.1.8.2.	SHA - HMAC Digest.....	35
5.1.8.3.	SHA - Context Switching.....	36
5.1.9.	UpdateExtra Command.....	37
5.1.10.	Write Command.....	37
5.1.10.1.	Data Zone - Clear Text Write.....	37
5.1.10.2.	Data Zone - Encrypted Write.....	38
5.2.	Asymmetric Cryptography Commands.....	38
5.2.1.	ECDH Command.....	39
5.2.1.1.	ECDH - Stored Key.....	39
5.2.1.2.	ECDH - TempKey Source.....	40
5.2.2.	GenKey Command.....	41
5.2.2.1.	Private Key - Stored in TempKey.....	41
5.2.2.2.	Public Key Generation.....	41
5.2.2.3.	Public Key Digest Generation.....	42
5.2.3.	Sign Command.....	42
5.2.3.1.	Sign - External Message.....	42
5.2.4.	Verify Command.....	43
5.2.4.1.	Verify - External Public Key Mode.....	43
5.2.4.2.	Verify - Stored Public Key Mode.....	44
5.3.	Symmetric Cryptography Commands.....	46
5.3.1.	AES Command.....	46
5.3.1.1.	AES-ECB Encrypt.....	46
5.3.1.2.	AES-GFM.....	47
5.3.2.	CheckMac Command.....	47
5.3.3.	DeriveKey Command.....	48
5.3.4.	GenDig Command.....	50
5.3.4.1.	GenDig - Config.....	51
5.3.4.2.	GenDig - OTP.....	51
5.3.4.3.	GenDig - Data.....	52
5.3.4.4.	GenDig - Shared Nonce.....	53
5.3.4.5.	GenDig - Counter.....	54
5.3.4.6.	GenDig - Key Config.....	54
5.3.5.	KDF Command.....	55
5.3.6.	MAC Command.....	55


5.3.6.1.	Non-Diversified MAC.....	55
5.3.6.2.	Diversified MAC.....	56
6.	Application Information.....	58
7.	I ² C Interface.....	59
7.1.	I/O Conditions.....	59
7.1.1.	Device is Asleep.....	59
7.1.2.	Device is Awake.....	60
7.2.	I ² C Transmission to ATECC608B-TNGLoRaWAN.....	61
7.2.1.	Word Address Values.....	61
7.2.2.	I ² C Synchronization.....	62
7.3.	Sleep Sequence.....	62
7.4.	Idle Sequence.....	62
7.5.	I ² C Transmission from the ATECC608B-TNGLoRaWAN.....	63
8.	Electrical Characteristics.....	64
8.1.	Absolute Maximum Ratings.....	64
8.2.	Reliability.....	64
8.3.	AC Parameters: All I/O Interfaces.....	64
8.3.1.	AC Parameters: I ² C Interface.....	65
8.4.	DC Parameters: All I/O Interfaces.....	66
8.4.1.	V _{IH} and V _{IL} Specifications.....	67
9.	Package Drawings.....	69
9.1.	Package Marking Information.....	69
9.2.	8-pad UDFN.....	70
9.3.	8-lead SOIC.....	73
10.	Compatibility.....	76
11.	Revision History.....	77
	The Microchip Website.....	78
	Product Change Notification Service.....	78
	Customer Support.....	78
	Product Identification System.....	79
	Microchip Devices Code Protection Feature.....	79
	Legal Notice.....	80
	Trademarks.....	80
	Quality Management System.....	81
	Worldwide Sales and Service.....	82

1. Pin Configuration and Pinouts

Table 1-1. Pin Configuration

Pin	Function
NC	No Connect
GND	Ground
SDA	I ² C Serial Data
SCL	I ² C Serial Clock Input
VCC	Power Supply

Figure 1-1. UDFN and SOIC Pinout

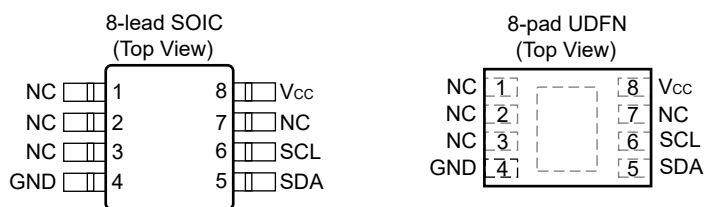

Note: The UDFN backside paddle is recommended to be connected to GND.

2. EEPROM Memory and Data Zone Access Policies

The EEPROM memory contains a total of 1,400 bytes and is divided into the following zones:

Table 2-1. ATECC608B-TNGLoRaWAN EEPROM Zones

Zone	Description	Nomenclature
Configuration	<p>Zone of 128 bytes (1,024 bits) EEPROM that contains:</p> <ul style="list-style-type: none"> • Device Configuration • Slot Access Policy Information • Counter Values • Device Serial Number • Lock Information <p>The LockConfig byte has already been set. Nothing can be directly written to this zone. The zone can always be read.</p>	Config[a:b] = A range of bytes within a field of the Configuration zone.
Data	<p>Zone of 1,208 bytes (9.7 Kb) split into 16 general purpose read-only or read/write memory slots. The slots are divided in the following way:</p> <ul style="list-style-type: none"> • Slots 0-7 Contain 36 Bytes • Slot 8 Contains 416 Bytes • Slots 9-15 Contain 72 Bytes <p>The Access Policy information defined by the Configuration zone bytes determines how each slot can be accessed. The Access Policy for each data slot in the ATECC608B-TNGLoRaWAN device has already been set and the slot Access Policies defined by the Configuration zone are in full effect. Some slots can be read from or written to while others cannot, depending upon that slot's Access Policy.</p>	Slot[YY] = The entire contents stored in Slot YY of the Data zone.
One-Time Programmable (OTP)	<p>Zone of 64 bytes (512 bits) arranged into two blocks of 32 bytes each. For the ATECC608B-TNGLoRaWAN, the zone has been preloaded with a predefined value. This zone cannot be modified but can be read at any time. See Section 2.3 ATECC608B-TNGLoRaWAN EEPROM One-Time Programmable (OTP) Zone for more information.</p>	OTP[bb] = A byte within the OTP zone, while OTP[aa:bb] indicates a range of bytes.

Table 2-2. Document Terms

Terms discussed within this document will have the following meanings:

Term	Meaning
Block	A single 256-bit (32-byte) area of a particular memory zone. The industry standard SHA-256 documentation also uses the term "block" to indicate a 512-bit section of the message input. Within this document, this convention is used only when describing hash input messages.
KeyID	KeyID is equivalent to the slot number for those slots designated to hold key values. Key 1 (sometimes referred to as key[1]) is stored in Slot[1] and so on. While all 16 slots can potentially hold keys, those slots, which are configured to permit clear-text reads, would not normally be used as private or secret keys by the crypto commands.
mode[b]	Indicates bit b of the parameter mode.
SRAM	Contains input and output buffers as well as internal state storage locations. This memory is not directly accessible by the user. See Section 3. Static RAM (SRAM) Memory .
Word	A single four-byte word of data read from or written to a block. The word is the smallest unit of data access.

2.1 ATECC608B-TNGLoRaWAN Configuration Zone

The ATECC608B-TNGLoRaWAN is largely fixed and cannot be modified by the customer. When using the Microchip Trust Platform Suite, all configuration information is taken into account by the tools. Relevant Information about how the device is configured is shown below or in the slot information.

Device Configuration Information

- The serial number for each device is unique and stored in configuration zone bytes [0:3,8:12]. Serial number bytes [0:1] are 0x01 0x23. Serial number byte[8] is dependent on the vendor. Note that the serial number stored in the configuration zone is split and configuration zone byte[12] maps to the vendor specific serial number byte[8].
 - For TTN byte[8] = 27
 - For Actility byte[8] = 10
- All other serial number bytes are unique.
- The default 7-bit I²C address is 0x59. The I²C address can be overwritten using the `UpdateExtra` command.



Important: The default I²C address of the ATECC608B-TNGLoRaWAN is not the same as that of the generic non-configured ATECC608B device.

- The I/O levels are set to a fixed reference level and, therefore, the micro can operate at a lower voltage than the ATECC608B-TNGLoRaWAN.
- The watchdog timer is set to a max timeout of 1.3s.
- The use of an I/O Protection key is enabled and stored in Slot 14.
- Slot locking is possible for some of the slots of the ATECC608B-TNGLoRaWAN. For the ATECC608B-TNGLoRaWAN, the following individual slots may be locked: Slots 8, 10 and 14.
- Monotonic counters are available for use by the system and are not attached to any keys.
- The Health Test Failure bit is cleared after any time that a command fails as a result of a health test failure. If the failure symptom was transient, the command may pass when run a second time.
- AES Operations are enabled.
- The KDF AES mode is enabled and the output of the KDF command is encrypted by the I/O Protection Key stored in Slot 14.
- Output of the ECDH command is encrypted by the I/O Protection Key stored in Slot 14..

2.1.1 Modifiable Configuration Zone Bytes

No bytes within the Configuration zone can be directly written since the Config zone has already been locked. Several bytes can still be modified through the use of other commands.

SlotLocked Bits

For the ATECC608B-TNGLoRaWAN, the following individual slots may be locked: Slots 8, 10 and 14. These can be locked through the SlotLock mode of the `Lock` command. Each slot where this feature is enabled can be individually locked just once. Once a slot has been locked, it can never be modified or unlocked but can still be used based on the Access Policies defined for that slot.

Bytes 88 and 89 store the SlotLocked bytes. Initially, all bits in these bytes are set to a value of one. For those slots that have been locked, the value of the respective bit will be set to a value of zero.

I²C Address Redefinition

This device configuration has been created such that the I²C address can be redefined one time. The `UpdateExtra` command can be used to rewrite byte 85 of the Configuration zone to a new I²C address. When this byte is set to a non-zero value, the device configuration uses byte 85 as its I²C address instead of the default address. Once this byte has been rewritten, the device must be powered-down or put into Sleep mode before this change takes effect.



Important: If there is no need to change the I²C address, this location must be written with the default I²C address.

User Extra Byte

The UserExtra byte can be used for any desired purpose. This byte can be updated just once with the `UpdateExtra` command. The UserExtra byte is located at byte 84 of the Configuration zone.

Counter[0,1]

While the counters are not used by this device, they are not disabled. If so desired, the monotonic counters may be used by the system. Note that the counters are initialized to zero and can count to the maximum value of 2,097,151. The counter value can be incremented or read through the use of the `Counter` command. How this counter is used is strictly up to the system and independent of anything else on the device. Counter values can be read or updated using the `Counter` command.

2.2 Data Zone and Access Policies

The following sections describe the detailed access policy information associated with each slot. The actual access policy information is stored within the Slot and Key configuration sections in the EEPROM Configuration zone. Each Data zone slot has two Slot Configuration Bytes and two Key Configuration Bytes associated with it. Together, these four bytes create the “Access Policies” for each slot. The actual type of data stored within the slot is determined by the Access Policies for that slot.

2.2.1 Data Zone Data Types

The following section provides more details on the various types of data capable of being stored in the ATECC608B-TNGLoRaWAN data slots.

2.2.1.1 AES Key Storage

LoRa Security is built around 128-bit AES symmetric keys. A wide variety of AES keys have been implemented to support the LoRaWAN specification in the ATECC608B-TNGLoRaWAN device. These include:

- Network and Application parent keys
- Application sessions keys
- Various types of Network and Server encryption keys
- Network and Server integrity keys

The `KDF` command in AES mode should be used to generate the necessary LoRaWAN session keys based on the AES parent keys stored in Slot 0. Optionally, these keys can be written as clear text. These keys are still considered secret and therefore can only be read via an encrypted read.

2.2.1.2 IEEE EUI-64 Identifier

The IEEE Extended Unique Identifier (EUI) is an 8-byte binary or hexadecimal value, which in this case, is used as a Device EUI to uniquely identify a LoRaWAN node. This globally unique Device EUI (DevEUI) is assigned and written into Slot 10 of the ATECC608B-TNGLoRaWAN. The DevEUI would be part of the reconstructed X.509 Certificate. For the ATECC608B-TNGLoRaWAN the IEEE EUI will be assigned by Microchip.

For the ATECC608B-TNGLoRaWAN, the 8-byte DevEUI is actually stored as a 16-byte ASCII-Hex value. Every digit of the hex EUI byte is represented by an ASCII character equivalent to its hexadecimal numerical value.

EUI-64 Identifier Example

1. The EUI-64 value is specified as an 8-byte hexadecimal value.
2. The individual hex digits are interpreted as ASCII characters

ATECC608B-LoRaWAN

EEPROM Memory and Data Zone Access Policies

3. Each of these characters are then translated to their actual ASCII hexadecimal code. So an 8-byte hexadecimal value will convert to a 16-byte ASCII-Hex value. Note the conversion between the ASCII character and the ASCII code in both decimal and hexadecimal are shown in [Table 2-3](#).

Table 2-3. Hex to ASCII Conversion

Hex / ASCII Char	ASCII Code		Hex / ASCII Char	ASCII Code	
	DEC	HEX		DEC	HEX
"0"	48	0x30	"8"	56	0x38
"1"	49	0x31	"9"	57	0x39
"2"	50	0x32	"A"	65	0x41
"3"	51	0x33	"B"	66	0x42
"4"	52	0x34	"C"	67	0x43
"5"	53	0x35	"D"	68	0x44
"6"	54	0x36	"E"	69	0x45
"7"	55	0x37	"F"	70	0x46

Table 2-4. DevEUI Conversion Example

	Byte 0		Byte 1		Byte 2		Byte 3		Byte 4		Byte 5		Byte 6		Byte 7	
ASCII Char	C	B	6	F	D	5	4	B	4	2	3	1	6	6	C	D
ASCII Code(DEC) ⁽¹⁾	67	66	54	70	68	53	52	66	52	50	51	49	54	54	67	68
ASCII Code(HEX) ⁽¹⁾	43	42	36	46	44	35	34	42	34	32	33	31	36	36	43	44

Note: (1) This is the actual 16-byte value stored in the data slot that represents the IEEE EUI-64 Identifier.

2.2.1.3 Repersonalization Key

Any given LoRaWAN device can be associated with only one network infrastructure provider. For example, a device that uses the TTI network infrastructure can only communicate to a Cloud Server that uses the TTI controlled LoRaWAN Join server. The same applies to a device that uses Actility as its resource provider.

The repersonalization key has been defined to allow a given LoRaWAN node to be securely re-keyed to another network infrastructure provider. The repersonalization key is a diversified key that is used to derive a new set of network and application parent (NwkKey/AppKey) keys stored in Slot 0.

If you want to transfer your LoRaWAN node off of the service provider's network, contact the service provider to obtain the necessary information.

2.2.1.4 Nonce Values

Specific nonce values are used with the LoRaWAN protocol. Nonce stands for the number used once and improves security by helping to randomize transactions. For the ATECC608B-TNGLoRaWAN device, a DevNonce is stored in Slot 9. Nonce data are stored as other data and are updated or incremented for each transaction.

2.2.1.5 Private Keys

ECC private keys are the fundamental building blocks of ECC security. These keys are private and unique to each device and can never be read. ECC private keys are randomly generated by the secure element's TRNG at provision-time and are securely held in slots configured as ECC private keys.

ECC private keys are not a critical part of the LoRaWAN security specifications. This slot has been provided to allow for ECC security to be added to a customer's LoRaWAN application.

Primary Private Key

This is the primary authentication key. It is permanent and cannot be changed. Each device has its own unique private key.

This key is enabled for two primary elliptic curve functions:

- ECDSA Sign for authentication
- ECDH for key agreement. If encryption of the ECDH output is required, then the I/O protection key needs to be first setup. See Section 2.2.1.8 [I/O Protection Key](#) for setup details.

This private key is the foundation for the generation of the corresponding public key and the X.509 Certificates.

2.2.1.6 ECC Public Keys

ECC public keys are not required as part of the LoRaWAN security specification. These keys can however be used for additional security use cases. Public keys are always associated with ECC private keys. Every ECC private key will have its own unique public key. For the ATECC608B-TNGLoRaWAN, three possible public keys can be used or generated:

- Slot 1 contains a primary ECC private key that can be used for ECDSA signs. The public key for this slot can always be generated and used for a verify operation.
- Slot 8 contains an ECC public key as part of the X.509 Certificate information. Certificates are not used as part of the LoRa authentication requirements.

2.2.1.7 Certificates Dynamic Storage

X.509 Certificates

X.509 Certificates are not a required part of the LoRaWAN security specification. If so desired, a given application may add additional security through use of X.509 Certificates. The ATECC608B-TNGLoRaWAN device has a dedicated Slot 8 for X.509 Certificates. Certificates are saved in a compressed format. This technique may be better called a partial certificate as it stores dynamic certificate information on the device and imposes some limitations. Dynamic information is certificate content that can be expected to change from device to device (e.g., public key, validity dates, etc.). Firmware is expected to have a certificate definition (`atcert_def_t` from `CryptoAuthLib`) with a template of the full X.509 Certificate containing static information (data that are the same for all certificates) and instructions on how to rebuild the full certificate from the dynamic information in the compressed certificate.

The following application note documents the compressed certificate format: [ATECC Compressed Certificate Definition](#).

The [CryptoAuthLib library](#) also contains the `atcert` module for working with compressed certificates.

Signer Public Key

The signer public key is the public key needed to verify the signer and the information that is associated with the signer compressed certificate. For the ATECC608B-TNGLoRaWAN, this is stored in Slot 8 in the first 72 bytes.

Device Certificate

The Device certificate consists of information associated with the actual end unit for the ATECC608B-TNGLoRaWAN.

Signer Certificate

The Signer certificate consists of the information associated with the signer used to sign the Device certificate. For the ATECC608B-TNGLoRaWAN.

The following table shows the storage locations for the various elements of the ATECC608B-TNGLoRaWAN X.509 Certificate.

Table 2-5. Slot 8 Storage

Item	Slot #	Bytes
Signer Public Key	8	[0:71]
Device Certificate	8	[72:143]

ATECC608B-LoRaWAN

EEPROM Memory and Data Zone Access Policies

.....continued		
Item	Slot #	Bytes
Signer Certificate	8	[144:215]
Additional Data Storage	8	[216-415]

2.2.1.8 I/O Protection Key

The `Verify`, `ECDH`, `MAC`, and `KDF` commands can optionally use the I/O protection feature to encrypt some parameters and validate (via `MAC`) some responses. This is to help protect against man-in-the-middle attacks on the physical I²C bus. However, before this feature can be used, the MCU and ATECC608B-TNGLoRaWAN need to generate and save a unique I/O protection key, essentially pairing the MCU and ATECC608B-TNGLoRaWAN devices to each other. The pairing process must happen on first boot.

I/O Protection Key Generation:

1. MCU uses random command to generate a random 32-byte I/O protection key.
2. MCU saves the I/O protection key in its internal Flash.
3. MCU writes I/O protection key to the I/O protection key slot.
4. MCU slot locks that slot to make the I/O protection key permanent.

As a pairing check, the MCU could use the `MAC` command to issue a challenge to the I/O protection key and verify the I/O protection key stored in Flash matches the one in the ATECC608B-TNGLoRaWAN.

2.2.1.9 General Data Storage

No slots have been specifically setup for General Data Storage. Extra data bytes not used within some of the AES keys may potentially be used for additional data storage if required. Discuss this option with Microchip prior to implementing this in any of the slots.

2.2.2 Slot Configuration Terminology

The following section provides a set of terms used to discuss configuration options. The terms are arranged alphabetically.

Term	Description
AES Key	Slot can be used as a key source for <code>AES</code> commands. The AES key is 128 bits in width for the ATECC608B-TNGLoRaWAN.
Always Write	Slot can be written in the clear with the <code>Write</code> command.
Clear Read	Slot is considered public (non-secret) and its contents can be read in the clear with the <code>Read</code> command.
ECDH	Elliptic Curve Diffie Hellman. Private key can be used with the <code>ECDH</code> command.
Encrypted Write	Slot can only be written using an encrypted write based on the write key specified.
Ext Sign	Private key can be used to sign external (arbitrary) messages.
Int Sign	Private key can be used to sign internal messages generated by the <code>GenKey</code> or <code>GenDig</code> commands. Used to attest the device's internal keys and configuration.
Lockable	Slot can be locked at some point in the future. Once locked, the slot contents cannot be changed (read/use only).
No Read	Slot is considered secret and its contents cannot be read with the <code>Read</code> command. Private keys and symmetric secrets should always be configured as <code>No Read</code> .
No Write	Slot cannot be changed with the <code>Write</code> command.
Permanent	Private key is permanent/unchangeable. It is internally generated during factory provisioning.
Updatable	Private key can be overwritten later with a new, random, internally-generated private key. Its initial value is internally generated during factory provisioning.

ATECC608B-LoRaWAN

EEPROM Memory and Data Zone Access Policies

2.2.3 ATECC608B-TNGLoRaWAN Slot Configuration Summary

The ATECC608B-TNGLoRaWAN has 16 slots that can be configured for different use cases. Below is a summary of those slots with their configuration and proposed uses for the ATECC608B-TNGLoRaWAN:

Slot	Use Case	Description	Primary Configuration
0	NwkKey/AppKey	Derived parent keys - used for deriving all session keys. These keys are derived with the individual device serial number and master parent key; the derived keys are said to be diversified.	Never readable/writable. Derive key can be run with the repersonalization key as the parent. Must supply DeriveKeyMAC. AES key.
1	Device private key	RFU - optional ECC private key. Device private key, public key can be generated from the private key.	ECC Private Key. Public Key can be generated, ECDH, external signs, permanent.
2	AppSKey	Application session key. Derived from AppKey and other information.	AES key. Always writable, encrypted reads with the IO protection key as read key. PubInfo set to allow KDF to write this slot.
3	NwkSEncKey	Network session encryption key. Derived from NwkKey and other information.	AES key. Always writable, encrypted reads with the IO protection key as read key. PubInfo set to allow KDF to write this slot.
4	SNwkSIntKey	Serving network session integrity key. Derived from NwkKey and other information.	AES key. Always writable, encrypted reads with the IO protection key as read key. PubInfo set to allow KDF to write this slot.
5	FNwkSIntKey	Forwarding network session integrity key. Derived from NwkKey and other information.	AES key. Always writable, encrypted reads with the IO protection key as read key. PubInfo set to allow KDF to write this slot.
6	JSIntKey	Join server integrity key. Derived from NwkKey and other information.	AES key. Always writable, encrypted reads with the IO protection key as read key. PubInfo set to allow KDF to write this slot.
7	JSEncKey	Join server encryption key. Derived from NwkKey and other information.	AES key. Always writable, encrypted reads with the IO Protection Key as read key. PubInfo set to allow KDF to write this slot.
8	Certificate data	RFU - signer and device compressed certificate data.	Always readable/writable. ECC public key. Lockable.
9	JoinEUI/DevNonce	JoinEUI and DevNonce, stored together in the same slot. Used in derive key calculation.	Always readable/writable.
10	DevEUI	Slot to hold a manually assigned IEEE EUI. Used to derive the session keys	Always readable/writable. Lockable.
11	McAppSKey	Multicast application session key.	AES key. Always writable, encrypted reads with the IO protection key as read key. PubInfo set to allow KDF to write this slot.
12	McNwkSKey	Muticast network session key.	AES key. Always writable, encrypted reads with the IO protection key as read key. PubInfo set to allow KDF to write this slot.

ATECC608B-LoRaWAN

EEPROM Memory and Data Zone Access Policies

.....continued

Slot	Use Case	Description	Primary Configuration
13	Repersonalization key	Diversified key that is used to derive a new set of NwkKey/AppKey parent keys (Slot 0). It can also be used as the encrypted write key for itself (Slot 13).	Never read, encrypted write. Repersonalization key is the write key.
14	IO protection key	Used to encrypt the output of the KDF command to encrypt newly derived keys back to the host. It can also be used as the encrypted read key for all session keys.	Never readable, always writable, lockable. ReqRand is set.
15	Reserved		

2.2.4 ATECC608B-TNGLoRaWAN Detailed Slot Access Policies

The following tables provide a more detailed description of each slot key and slot configuration information along with what commands and command modes can be run using this slot.

Table 2-6. Slot 0 Configuration Information

Slot	Configuration Value	Description of Enabled Features
0	Key:	NwkKey/AppKey^(1,2) <ul style="list-style-type: none"> 128-bit AES diversified network parent key 128-bit AES diversified application parent key Writes by KDF command are not permitted
	Slot:	<ul style="list-style-type: none"> Derive key allowed with authorizing MAC Key stored in Slot 13 used for key derivation Contents of the slot are secret and cannot be read.
	Valid commands	<ul style="list-style-type: none"> DeriveKey command KDF AES command source key for generating other derived keys

Table 2-7. Slot 1 Configuration Information

Slot	Configuration Value	Description of Enabled Features
1	Key:	Device Private Key <ul style="list-style-type: none"> Slot contains the P256 NIST ECC private key A public version the of key can always be generated
	Slot:	<ul style="list-style-type: none"> Key generation is never permitted Contents of this slot are secret ECDH operations are permitted External signature of arbitrary messages is enabled
	Valid commands	<ul style="list-style-type: none"> GenKey - Public Key Generation GenKey - PublicKey Digest Generation Sign - External Message

ATECC608B-LoRaWAN

EEPROM Memory and Data Zone Access Policies

Table 2-8. Slot 2 Configuration Information

Slot	Configuration Value	Description of Enabled Features
2	Key:	Application Session Key <ul style="list-style-type: none"> 128-bit AES session key Writes by KDF command are permitted
	Slot:	<ul style="list-style-type: none"> Writes are always permitted Contents of this slot are secret Reads from this slot are encrypted using the key stored in Slot 14
	Valid commands	<ul style="list-style-type: none"> Clear Text Write KDF Write Encrypted Read

Table 2-9. Slot 3 Configuration Information

Slot	Configuration Value	Description of Enabled Features
3	Key:	Network Session Encryption Key <ul style="list-style-type: none"> 128-bit AES session key Writes by KDF command are permitted
	Slot:	<ul style="list-style-type: none"> Writes are always permitted Contents of this slot are secret Reads from this slot are encrypted using the key stored in Slot 14
	Valid commands	<ul style="list-style-type: none"> Clear Text Write KDF Write Encrypted Read

Table 2-10. Slot 4 Configuration Information

Slot	Configuration Value	Description of Enabled Features
4	Key:	Serving Network Session Integrity Key <ul style="list-style-type: none"> 128-bit AES session key Writes by KDF command are permitted
	Slot:	<ul style="list-style-type: none"> Writes are always permitted Contents of this slot are secret Reads from this slot are encrypted using the key stored in Slot 14
	Valid commands	<ul style="list-style-type: none"> Clear Text Write KDF Write Encrypted Read

ATECC608B-LoRaWAN

EEPROM Memory and Data Zone Access Policies

Table 2-11. Slot 5 Configuration Information

Slot	Configuration Value	Description of Enabled Features
5	Key:	Forwarding Network Session Integrity Key <ul style="list-style-type: none"> 128-bit AES session key Writes by KDF command are permitted
	Slot:	<ul style="list-style-type: none"> Writes are always permitted Contents of this slot are secret Reads from this slot are encrypted using the key stored in Slot 14
	Valid commands	<ul style="list-style-type: none"> Clear Text Write KDF Write Encrypted Read

Table 2-12. Slot 6 Configuration Information

Slot	Configuration Value	Description of Enabled Features
6	Key:	Join Server Integrity Key <ul style="list-style-type: none"> 128-bit AES session key Writes by KDF command are permitted
	Slot:	<ul style="list-style-type: none"> Writes are always permitted Contents of this slot are secret Reads from this slot are encrypted using the key stored in Slot 14
	Valid commands	<ul style="list-style-type: none"> Clear Text Write KDF Write Encrypted Read

Table 2-13. Slot 7 Configuration Information

Slot	Configuration Value	Description of Enabled Features
7	Key:	Join Server Encryption Key <ul style="list-style-type: none"> 128-bit AES session key Writes by KDF command are permitted
	Slot:	<ul style="list-style-type: none"> Writes are always permitted Contents of this slot are secret Reads from this slot are encrypted using the key stored in Slot 14
	Valid commands	<ul style="list-style-type: none"> Clear Text Write KDF Write Encrypted Read

ATECC608B-LoRaWAN

EEPROM Memory and Data Zone Access Policies

Table 2-14. Slot 8 Configuration Information

Slot	Configuration Value	Description of Enabled Features
8	Key:	Certificate Data <ul style="list-style-type: none"> Slot contains ECC public key and certificate data Slot is lockable
	Slot:	<ul style="list-style-type: none"> Writes are always permitted Reads are always permitted
	Valid commands	<ul style="list-style-type: none"> Write - Clear Text Read - Clear Text Lock - SlotLock mode Verify - Stored Public Key Mode

Table 2-15. Slot 9 Configuration Information

Slot	Configuration Value	Description of Enabled Features
9	Key:	JoinEUI⁽³⁾/DevNonce <ul style="list-style-type: none"> Slot contains other data Data are used in derive key calculation
	Slot:	<ul style="list-style-type: none"> Writes are always permitted Reads are always permitted
	Valid commands	<ul style="list-style-type: none"> Write - Clear Text Read - Clear Text

Table 2-16. Slot 10 Configuration Information

Slot	Configuration Value	Description of Enabled Features
10	Key:	DevEUI⁽⁴⁾ <ul style="list-style-type: none"> Slot contains other data (manually assigned Device EUI) Data is used to derive the session keys Slot is lockable
	Slot:	<ul style="list-style-type: none"> Writes are always permitted Reads are always permitted
	Valid commands	<ul style="list-style-type: none"> Write - Clear Text Read - Clear Text Lock - SlotLock mode

ATECC608B-LoRaWAN

EEPROM Memory and Data Zone Access Policies

Table 2-17. Slot 11 Configuration Information

Slot	Configuration Value	Description of Enabled Features
11	Key:	Multicast Application Session Key <ul style="list-style-type: none"> Slot contains 128-bit AES session key Writes by KDF command are permitted
	Slot:	<ul style="list-style-type: none"> Writes are always permitted Contents of this slot are secret Reads from this slot are encrypted using the key stored in Slot 14
	Valid commands	<ul style="list-style-type: none"> Write - Clear Text KDF - AES Mode Encrypted Read AES

Table 2-18. Slot 12 Configuration Information

Slot	Configuration Value	Description of Enabled Features
12	Key:	Multicast Network Session Key <ul style="list-style-type: none"> Slot contains 128-bit AES session key Writes by KDF command are permitted
	Slot:	<ul style="list-style-type: none"> Writes are always permitted Contents of this slot are secret Reads from this slot are encrypted using the key stored in Slot 14
	Valid commands	<ul style="list-style-type: none"> Write - Clear Text KDF - AES Mode Encrypted Read AES

Table 2-19. Slot 13 Configuration Information

Slot	Configuration Value	Description of Enabled Features
13	Key:	Repersonalization Key <ul style="list-style-type: none"> Slot contains a SHA256 key
	Slot:	<ul style="list-style-type: none"> Slot may be written with an encrypted write back to itself Data stored in slot is secret and reads are prohibited Key cannot be used with the <code>MAC</code> command.
	Valid commands	<ul style="list-style-type: none"> Encrypted Write CheckMac GenDig

ATECC608B-LoRaWAN

EEPROM Memory and Data Zone Access Policies

Table 2-20. Slot 14 Configuration Information

Slot	Configuration Value	Description of Enabled Features
14	Key:	IO Protection Key <ul style="list-style-type: none"> Slot contains a SHA-256 key A random nonce is required when using this key This slot is lockable
	Slot	<ul style="list-style-type: none"> Slot is always writable Data in slot is secret and reads are prohibited
	Valid commands	<ul style="list-style-type: none"> Write - Clear Text CheckMac GenDig Lock - SlotLock mode

Notes:

- Each Major LoRa Network provider will have their own Unique parent key which is used to generate the diversified keys stored in the ATECC608B-TNGLoRaWAN device.
- For the ATECC608B-TNGLoRaWAN Diversified Parent Keys are generated based on TTI, or Actility.
- The JoinEUI value is associated with a particular network provider. For the ATECC608B-TNGLoRaWAN this value will be associated with either TTI or Actility.
- The DevEUI is an IEEE Extended Unique Identifier. Each device will have its own value. For the ATECC608B-TNGLoRaWAN the DevEUI will be assigned by Microchip.

2.3 ATECC608B-TNGLoRaWAN EEPROM One-Time Programmable (OTP) Zone

The OTP zone of 64 bytes (512 bits) is part of the EEPROM array and can be used for read-only storage. It is organized as two blocks of 32 bytes each. For the ATECC608B-TNGLoRaWAN, the OTP zone is shipped pre-locked and contains the following information:

TTI OTP Zone Values

```
6A 73 4D 75 37 69 59 4F 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

Actility OTP Zone Values

```
30 39 71 4A 4E 78 49 33 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

The data byte values written into the OTP zone are always available for reading using either 4 or 32-byte reads but can never be modified.



Notice: The bytes in the OTP zone may change over time. These values should not be used in any cryptographic calculations.

3. Static RAM (SRAM) Memory

The device also includes an SRAM array that is used to store the input command or output result, nonces, intermediate computation values, ephemeral keys, the SHA context, etc. The contents of the SRAM can never be read directly; only used internally by the secure element. The entire contents of this memory are invalidated whenever the device goes into Sleep mode or the power is removed.

The SRAM Array consists of the following buffers:

TempKey

TempKey is the primary storage register in the SRAM array that can be used to store various intermediate values generated by various commands. TempKey is 64 bytes long and is divided into an upper and lower half. The contents of this register can never be read from the device (although the device itself can read and use the contents internally).

Message Digest Buffer

The Message Digest Buffer is a 64-byte register that is used to convey the input message digest to the `Verify` and `Sign` commands when the TempKey register is needed to retain different information. The `SHA` command can write a digest directly to this register to simplify external host programming.

Alternate Key Buffer

The Alternate Key Buffer is a 32-byte register that can be used by the `KDF` command to store keys when the TempKey register is needed to retain different information. It can be written to a fixed input value by the `Nonce` command or to a secret value by the `KDF` command.

SHA Context Buffer

The SHA context buffer allows for the generation of a digest to be interrupted to do other functions or to generate other digests. The `SHA` command uses a standard three-phase flow: Initialize, Update and Finalize. In many situations, the Update phase is run many times. Internal SRAM memory is used to store the intermediate state, aka SHA context, between these phases.

4. General Command Information

The following sections provide some general information on the basic I/O transactions, command structure, error codes, memory addressing and formatting of keys and signatures that are used in the ATECC608B-TNGLoRaWAN.

4.1 I/O Transactions

The ATECC608B-TNGLoRaWAN uses the I²C protocol to communicate with a host microcontroller. Security commands are sent to the device and responses are received from the device within a transaction that is constructed in the following way:

Table 4-1. I/O Transaction Format

Byte	Name	Meaning
0	Count	Number of bytes to be transferred to (or from) the device in the group, including the count byte, packet bytes and checksum bytes. Therefore, the count byte must always have a value of (N+1), where N is equal to the number of bytes in the packet plus the two checksum bytes. For a group with one count byte, 50 packet bytes and two checksum bytes, the count byte must be set to 53. The maximum size group (and value of count) is 155 bytes and the minimum size group is four bytes. Values outside this range will cause the device to return an I/O error.
1 to (N-2)	Packet	Command, parameters and data or response. See Section 4.2 Command Packets for general command packet information or Section 5. Device Commands for specific parameters for each command.
N-1, N	Checksum	CRC-16 verification of the count and packet bytes. The CRC polynomial is 0x8005. Prior to the start of the CRC calculation, the CRC register is initialized to zero. After the last bit of the count and packet have been transmitted, the internal CRC register must have a value that matches the checksum bytes in the block. The first CRC byte transmitted (N-1) is the Least Significant Byte of the CRC value, so the last byte of the group is the Most Significant Byte of the CRC.

The ATECC608B-TNGLoRaWAN is designed to have the count value in the input group consistent with the size requirements that are specified in the command parameters. If the count value is inconsistent with the command opcode and/or parameters within the packet, the ATECC608B-TNGLoRaWAN responds in different ways depending upon the specific command. The response may either include an error indication or some input bytes may be silently ignored.

4.2 Command Packets

The command packet is broken down as shown in [Table 4-2](#):

Table 4-2. Command Packets

Byte	Name	Meaning
0	Opcode	The command code. See Section 5. Device Commands .
1	Param1	The first parameter; always present.
2 – 3	Param2	The second parameter; always present.
0 – 155	Data	Optional remaining input data.

After the ATECC608B-TNGLoRaWAN receives all the bytes in a group, the device transitions to the Busy state and attempts to execute the command. Neither status nor results can be read from the device when it is busy. During this time, the I/O interface of the device ignores all transitions on the I²C SDA input signal.

4.3 Status/Error Codes

The device does not have a dedicated STATUS register, so the output FIFO is shared among status, error, and command results. All outputs from the device are returned to the system as complete groups which are formatted identically to input groups:

- Count
- Packet
- Two byte CRC

After the device receives the first byte of an input command group, the system cannot read anything from the device until the system has sent all the bytes to the device.

After the wake and execution of a command, there will be error, status, or result bytes in the device's output register that can be retrieved by the system. For a four bytes length of that group, the codes returned are detailed in [Table 4-3](#). Some commands return more than four bytes when they execute successfully. The resulting packet description is listed in [Section 5. Device Commands](#).

CRC errors are always returned before any other type of error. They indicate that an I/O error occurred, and that the command may be resent to the device. No particular precedence is enforced among the remaining errors if more than one occurs.

Table 4-3. Status/Error Codes in Four Byte Groups

State Description	Error/Status	Description
Successful Command Execution	0x00	Command executed successfully.
Checksum or Verify Mismatch	0x01	The <code>CheckMac</code> or <code>Verify</code> command was properly sent to the device, but the input response did not match the expected value.
Parse error	0x03	Command was properly received but the length, command opcode, or parameters are illegal regardless of the state (volatile and/or EEPROM configuration) of the ATECC608B-TNGLoRaWAN. Changes in the value of the command bits must be made before it is re-attempted.
ECC Fault	0x05	A computation error occurred during ECC processing that caused the result to be invalid. Retrying the command may result in a successful execution.
Self Test error	0x07	There was a Self Test error and the chip is in Failure mode waiting for the failure to be cleared.
Health Test error	0x08	There was a random number generator Health Test error and the chip fails subsequent commands requiring a random number until it is cleared.
Execution error	0x0F	Command was properly received but could not be executed by the device in its current state. Changes in the device state or the value of the command bits must be made before it is re-attempted.
After Wake, Prior to First command	0x11	Indication that ATECC608B-TNGLoRaWAN has received a proper Wake token.
Watchdog About to Expire	0xEE	There is insufficient time to execute the given command before the Watchdog Timer expires. The system must reset the Watchdog Timer by entering the Idle or Sleep modes.
CRC or Other Communications error	0xFF	Command was not properly received by ATECC608B-TNGLoRaWAN and should be retransmitted by the I/O driver in the system. No attempt was made to parse or execute the command.

4.4 Address Encoding

The following subsections provide detailed information on how to address the various memory zones of the ATECC608B-TNGLoRaWAN device.

4.4.1 Configuration Zone Addressing

The Configuration zone can be accessed either 4 or 32 bytes at a time. Individual bytes cannot be accessed. The Configuration zone address is a 2-byte (16-bit value). Only the lowest five bits of the address word are used in addressing of the Configuration zone. For the ATECC608B-TNGLoRaWAN device, these addresses can only be used with the `Read` command.

Table 4-4. Address Format

Byte 1: Addr[15:8]	Byte 0: Addr[7:0]		
Unused	Unused	Block	Offset
Addr[15:8]	Addr[7:5]	Addr[4:3]	Addr[2:0]

Table 4-5. Configuration Zone Addresses

Block # (Addr[4:3])	Offset Value (Addr[2:0])							
	000	001	010	011	100	101	110	111
00	[0:3]	[4:7]	[8:11]	[12:15]	[16:19]	[20:23]	[24:27]	[28:31]
01	[32:35]	[36:39]	[40:43]	[44:47]	[48:51]	[52:55]	[56:59]	[60:63]
10	[64:67]	[68:71]	[72:75]	[76:79]	[80:83]	[84:87]	[88:91]	[92:95]
11	[96:99]	[100:103]	[104:107]	[108:111]	[112:115]	[116:119]	[120:123]	[124:127]

4.4.2 OTP Zone Addressing

The One-Time Programmable (OTP) zone can be accessed either 4 or 32 bytes at a time. The zone has a total of 64 bytes. Individual bytes cannot be accessed. The OTP zone address is a 2-byte (16-bit value). Only the lowest four bits are used in addressing.

For the ATECC608B-TNGLoRaWAN device, these addresses can only be used with the `Read` command.

Table 4-6. Address Format

Byte 1: Addr[15:8]	Byte 0: Addr[7:0]		
Unused	Unused	Block	Offset
Addr[15:8]	Addr[7:4]	Addr[3]	Addr[2:0]

Table 4-7. OTP Zone Byte Addresses

Block # (Addr[3])	Block Offset Value (Addr[2:0])							
	000	001	010	011	100	101	110	111
0	[0:3]	[4:7]	[8:11]	[12:15]	[16:19]	[20:23]	[24:27]	[28:31]
1	[32:35]	[36:39]	[40:43]	[44:47]	[48:51]	[52:55]	[56:59]	[60:63]

4.4.3 DataZone Addressing

Read/Write access to the Data zone is much more complex than the Configuration and OTP zones. There are a total of 16 slots and the size of the slots vary. Each slot's access policies individually control whether or not a slot has the ability to be read or written.

For the ATECC608B-TNGLoRaWAN:

- Data Slots 2-7, 8-12 and 14 can be written as clear text.
- Data Slot 13 can be written with encrypted text.
- Data Slots 8, 9, 10 can be read as clear text.
- Data Slots 2-7 and 11-12 can be read as encrypted text.
- Any slots not specified cannot be read or written.

Table 4-8. Address Format by Data Slot Size

Data Zone	Byte 1 Addr[15:8]		Byte 0: Addr[7:0]		
	Unused	Block	Unused	Slot	Offset
Data Slots[7:0]	Addr[15:9]	Addr[8]	Addr[7]	Addr[6:3]	Addr[2:0]
Data Slot[8]	Addr[15:12]	Addr[11:8]	Addr[7]	Addr[6:3]	Addr[2:0]
Data Slot[15:9]	Addr[15:10]	Addr[9:8]	Addr[7]	Addr[6:3]	Addr[2:0]

Data Slots[7:0]

To fully access one of these slots require two 32-byte accesses or nine 4-byte accesses

Table 4-9. Data Zone Addresses Slots 0-7

Slot# (Addr[6:3])	Block # (Addr[8])	Block Offset Value (Addr[2:0])							
		000	001	010	011	100	101	110	111
0x0 to 0x7	00	[0:3]	[4:7]	[8:11]	[12:15]	[16:19]	[20:23]	[24:27]	[28:31]
	01	[32:35]	Not Valid	Not Valid	Not Valid	Not Valid	Not Valid	Not Valid	Not Valid

Data Slot[8]

To fully access this slot require thirteen 32-byte accesses or 104 4-byte accesses or a combination of the two methods.

Table 4-10. Data Zone Addressing Slot 8

Slot# (Addr[6:3])	Block # (Addr[8])	Block Offset Value (Addr[2:0])							
		000	001	010	011	100	101	110	111
0x8	0x0	[0:3]	[4:7]	[8:11]	[12:15]	[16:19]	[20:23]	[24:27]	[28:31]
	0x1	[32:35]	[36:39]	[40:43]	[44:47]	[48:51]	[52:55]	[56:59]	[60:63]

	0xC	[384:387]	[388:391]	[392:395]	[396:399]	[400:403]	[404:407]	[408:411]	[412:415]

Data Slots[15:9]

To fully access these slots requires three 32-byte accesses or eighteen 4-byte accesses or a combination of the two methods.

Table 4-11. Data Zone Addressing Slots 9-15

Slot# (Addr[6:3])	Block # (Addr[8])	Block Offset Value (Addr[2:0])							
		000	001	010	011	100	101	110	111
0x9 to 0xF	00	[0:3]	[4:7]	[8:11]	[12:15]	[16:19]	[20:23]	[24:27]	[28:31]
	01	[32:35]	[36:39]	[40:43]	[44:47]	[48:51]	[52:55]	[56:59]	[60:63]
	10	[64:67]	[68:71]	Not Valid	Not Valid	Not Valid	Not Valid	Not Valid	Not Valid

4.5 Formatting of Keys, Signatures and Certificates

The following sections provide detailed formatting information for ECC keys, Signatures and Compressed certificates.

4.5.1 ECC Key Formatting

The format for public and private keys depends on the command and key length. In general, the Most Significant Bytes (MSB) appear first on the bus and at the lowest address in memory. In the remainder of this section below, the bytes on the left side of the page are the MSBs. Microchip recommends all pad bytes be set to zero for consistency.

- ECC private keys appear to the user only as the input parameter to the `PrivWrite` command. This parameter is always 36 bytes in length and the first four bytes (32 bits) are all pad bytes.
ECC public keys appear as the input or output parameters to several commands, and they can also be stored in EEPROM. They are composed of an X value first on the bus or in memory, followed by a Y value. They are formatted differently depending on the situation as noted below:
- The public key is an output of the `GenKey` command or an input to the `Verify` command:**
32 bytes of X, then 32 bytes of Y. (36 bytes) There are no pad bytes.
- Write command:**
Public keys can be written directly to the EEPROM using the `Write` command and are always 72 bytes long, formatted as follows: 4-pad bytes, 32 bytes of X, four pad bytes, then 32 bytes of Y.
- GenKey command:**
SHA Message: Public keys can be hashed and placed in `TempKey` by the `GenKey` command. The SHA message contains various bytes that are independent of the size of the key. These are followed by 25 bytes of pad, followed by 32 bytes of X, then by 32 bytes of Y.
- Verify command:**
SHA Message: When used to validate a stored public key, the `Verify` command expects an input signature created over a SHA-256 digest of a key stored in memory. Such an inner SHA calculation is always performed over 72 bytes formatted as they are stored in EEPROM as 4-pad bytes, 32 bytes of X, 4-pad bytes, then 32 bytes of Y.

When a public key is configured to be validated by the `Verify` command, the Most Significant four bits of the first byte in memory are used internally by the device to save the validation state. They are always set to the invalid state (0xA) by the `Write` command, and then may be set to the Valid state (0x5) by the `Verify` command.

The lowest levels of the I/O protocols are described below. Above the I/O protocol level, the exact same bytes are transferred to and from the device to implement the commands. Error codes are documented in the following sections.

4.5.1.1 Public Key Formats

The ATECC608B-TNGLoRaWAN works with the P-256 elliptic curve public keys in two formats. The following example illustrates those two formats in detail.

For the following examples, we'll use a sample public key, with the X and Y integers expressed as fixed-width big-endian unsigned integers:

```
X: b2be345ad7899383a9aab4fb968b1c7835cb2cd42c7e97c26f85df8e201f3be8
Y: a82983f0a11d6ff31d66ce9932466f0f2cca21ef96bec9ce235b3d87b0f8fa9e
```


Command Public Key Format

Any command that returns a public key (GenKey) or accepts a public key as a parameter (Verify and ECDH) will format the public key as the X and Y big-endian unsigned integers concatenated together for a total of 64 bytes.

For example:

```
b2be345ad7899383a9aab4fb968b1c7835cb2cd42c7e97c26f85df8e201f3be8  
a82983f0a11d6ff31d66ce9932466f0f2cca21ef96bec9ce235b3d87b0f8fa9e
```

Stored Public Key Format

When storing a public key in a slot for use with the `Verify` command, the X and Y integers will be padded out to 36 bytes and concatenated together for a total of 72 bytes.

For example:

```
00000000b2be345ad7899383a9aab4fb968b1c7835cb2cd42c7e97c26f85df8e201f3be8  
00000000a82983f0a11d6ff31d66ce9932466f0f2cca21ef96bec9ce235b3d87b0f8fa9e
```

Note: Only slots 8-15 are large enough to hold a public key.

Stored Validated Public Key Format

A validated or invalidated public key format is the same as a stored public key format with the exception of the four Most Significant bits of the LSB. If a key is validated, the Least Significant Nibble will be 0x5 and 0xA if invalidated. These values can be changed by the `Verify` command in Validate or Invalidate mode. When written, the key will be initially invalidated.

Example Validated Public Key:

```
50000000b2be345ad7899383a9aab4fb968b1c7835cb2cd42c7e97c26f85df8e201f3be8  
00000000a82983f0a11d6ff31d66ce9932466f0f2cca21ef96bec9ce235b3d87b0f8fa9e
```

Example Invalidated Public Key:

```
A0000000b2be345ad7899383a9aab4fb968b1c7835cb2cd42c7e97c26f85df8e201f3be8  
00000000a82983f0a11d6ff31d66ce9932466f0f2cca21ef96bec9ce235b3d87b0f8fa9e
```

Note: Only slots 8-15 are large enough to hold a public key.

4.5.2 Signature Format

The ECDSA signature that is generated and output by the `Sign` command or input to the `Verify` command is always 64 bytes in length. The signature is divided into R and S components. Both components are 32 bytes in length and R always appears before S on the bus. Each portion of the signature appears MSB first on the bus, meaning the MSB of the signature is in the lowest memory location.

Example R/S Signature

Any command that returns a signature (`Sign`) or accepts a signature as a parameter (`Verify`) will format the signature as the R and S big-endian unsigned integers concatenated together for a total of 64 bytes.

For example:

```
R: 7337887F8C39DF79FD8BF88DDF8B99DB15D7B1AD68196AE3FB0CE5BFA2842DF3  
S: 72868A43A42831E950E1DA9F73B29F5C0ED8A96B2889E3CBBE8E61EA6C67F673
```

4.5.3 Certificate Storage

The amount of storage required for a full X.509 Certificate within the device can rapidly use up multiple EEPROM memory slots. Depending on the actual application, it may or may not be desirable to use these slots for certificate storage. Due to these memory limitations, Microchip has defined an encoding that allows for a full X.509 Certificate to be reconstructed from a minimal amount of information.

The host system would actually be responsible for reconstructing the full X.509 Certificate but how to do this will be determined by the data stored in the encoded certificate. Data that are common to all devices for a given system can readily be stored in the host system. Other data can readily be calculated or extracted from data that are already stored in the device. [Table 4-12](#) indicates the type of data that are stored in an X.509 Certificate and how it can be encoded to fit into a single 72-byte slot.

Table 4-12. Certificate Storage

X.509 Certificate		Encoded Certificate		
X.509 Element	Size (Bytes)	Encoded Certificate Element	Device Cert (Bits)	Signer Cert (Bits)
Serial Number	8-20	Serial number source	4	4
Issue Date	13	Compressed format	19	19
Expiry Date	13	# of years before expiration	5	5
Signer ID ²	4	ID of the specific signer used to sign the certificate (device cert) or of the signer itself (signer cert)	16	16
AuthorityKeyIdentifier	20	SHA1 HASH of the authority public key	0	0
SubjectKeyIdentifier	20	SHA1 HASH of the subject public key	0	0
Signature R	32	Stored in device	256	256
Signature S	32	Stored in device	256	256
Public Key X ¹	32	Calculated from the private key or stored in the device ¹	0	256
Public Key Y ¹	32	Calculated from the private key or stored in the device ¹	0	256
n/a	0	Cert format	4	4
n/a	0	Template ID	4	4
n/a	0	Chain ID	4	4
n/a	0	Reserved/User Defined	8	8
Total	(206-218 bytes)	—	576 bits (72 bytes)	1088 bits (136 bytes)

Notes:

1. For the device certificate, the device public key can be regenerated from the private key. For the signer certificate, the public key is typically stored in a separate slot.
2. For the device certificate, the ID of the signer used to sign the certificate is stored. For the signer certificate, the actual ID of the signer is stored so that the device can identify it.

Slot 8 contains a total of 416 bytes. Depending on the size of the serial number stored in the cert, it may or may not be possible to store two complete certificates. Often within devices where a chain of trust has been created, the device certificate, the signer certificate and the signer public key must be stored within the device.

For more information, see the [Compressed Certificate Definition](#) Application Note.

5. Device Commands

The following section details all of the commands broken out by Command mode that are allowed in the ATECC608B-TNGLoRaWAN. The commands have been broken into three categories:

1. General Device Commands

These commands fall into two categories:

- General device access commands that are used to send data to the device or retrieve data but typically do not perform any cryptographic functions.
- General cryptographic commands that can be used by the device or the system but typically do not operate on specific data slots.

2. Asymmetric Cryptography Commands

These commands perform asymmetric cryptographic operations, such as key generation, message signing and message verification that utilize an ECC public or private key. These commands are limited to use on ECC Data zone slots.

3. Symmetric Cryptography Commands

These commands perform a symmetric cryptographic function, such as generating a digest or MAC, key derivation or AES encryption and decryption.

Input Parameters for all Commands

Multibyte input parameters are shown as big-endian (MSB first) values in the input parameters tables unless otherwise specified. Note that the ATECC608B-TNGLoRaWAN device actually expects the data to be sent little-endian (LSB first).

Table 5-1. Command Opcodes, Short Descriptions, and Categories

Command	Opcode	Description	Command Category
AES	0x51	Execute the AES-ECB Encrypt or Decrypt functions. Calculate a Galois Field Multiply.	Symmetric Cryptography Command
CheckMac	0x28	Verify a MAC calculated on another CryptoAuthentication device.	Symmetric Cryptography Command
Counter	0x24	Read or increment one of the monotonic counters	General Device Commands
DeriveKey	0x1C	Derive a target key value from the target or parent key.	Symmetric Cryptography Command
ECDH	0x43	Generate an ECDH pre-master secret using stored private key and input public key.	Asymmetric Cryptography Command
GenDig	0x15	Generate a data digest from a random or input seed and a stored value.	Symmetric Cryptography Command
GenKey	0x40	Generate an ECC public key. Optionally generate an ECC private key.	Asymmetric Cryptography Command
Info	0x30	Return device state information.	General Device Commands
KDF	0x56	Implement the PRF or HKDF key derivation functions	Symmetric Cryptography Command
Lock	0x17	Prevent further modifications to a zone or slot of the device.	General Device Commands
MAC	0x08	Calculate digest (response) from key and other internal data using SHA-256.	Symmetric Cryptography Command
Nonce	0x16	Generate a 32-byte random number and an internally stored Nonce.	General Device Commands
Random	0x1B	Generate a random number.	General Device Commands

.....continued

Command	Opcode	Description	Command Category
Read	0x02	Read 4 or 32 bytes from the device, with or without authentication and encryption.	General Device Commands
SelfTest	0x77	Test the various internal cryptographic computation elements	General Device Commands
Sign	0x41	ECDSA signature calculation.	Asymmetric Cryptography Command
SHA	0x47	Compute a SHA-256 or HMAC digest for general purpose use by the system.	General Device Commands
UpdateExtra	0x20	Update bytes 84 or 85 within the Configuration zone after the Configuration zone is locked.	General Device Commands
Verify	0x45	ECDSA verify calculation.	Asymmetric Cryptography Command
Write	0x12	Write 4 or 32 bytes to the device, with or without authentication and encryption.	General Device Commands

5.1 General Device Commands

The following table provides a summary of the general device commands:

Table 5-2. General Device Commands

Command Name	Opcode	Description
Counter	0x24	Increments and reads the monotonic counters.
Info	0x30	Used to read revision and status information from the device.
Lock	0x17	Used to lock the individual lockable slots in the device.
Nonce	0x16	Used to generate or pass a number used once into the device.
Random	0x1B	Used to generate a 32-byte random number used by the system.
Read	0x02	Used to read various zones of the device.
SelfTest	0x77	Tests the various internal cryptographic computation elements.
SHA	0x47	Computes a SHA-256 or HMAC digest for general purpose use by the system.
UpdateExtra	0x20	Updates bytes 84 or 85 within the Configuration zone after the Configuration zone is locked.
Write	0x12	Used to write 4 or 32 bytes to the device, with or without authentication and encryption.

5.1.1 Counter Command

The `Counter` command reads the binary count value from one of the two monotonic counters located on the device within the Configuration zone. The maximum value that the counter may have is 2,097,151. Any attempt to count beyond this value will result in an error code. The counter is designed to never lose counts even if the power is interrupted during the counting operation. In some power loss conditions, the counter may increment by a value of more than one.

For the ATECC608B-TNGLoRaWAN, the counters are not attached to any keys but may still be used by the system. Each count is set to its default value and can count to the maximum value.

Table 5-3. Input Parameters Count

Opcode (1 Byte)	Mode (1 Byte)	KeyID (2 Bytes)	Description
0x24	0x00	0x00 00	Reads the value of Counter[0]
		0x00 01	Reads the value of Counter[1]
	0x01	0x00 00	Increments the value of Counter[0]
		0x00 01	Increments the value of Counter[1]

Table 5-4. Output Response Count

Name	Size	Description
Count	4 bytes	Counter value in binary if the command succeeds.
Response	1 byte	Error code if the command fails.

5.1.2 Info Command

The `Info` command is used to read the status and state of the device. This information is useful in determining errors or to operate various commands.

5.1.2.1 Info - Revision

The Revision mode of the `Info` command reads back the silicon revision of the ATECC608B-TNGLoRaWAN. This information is hard coded into the device. This information may or may not be the same as what is read back in the Revision bytes shown in the Configuration zone.

Table 5-5. Input Parameters - Info Revision

Opcode (1 Byte)	Mode (1 Byte)	Param (2 Bytes)	Data (0 Bytes)	Description
0x30	0x00	0x00 00	—	Returns silicon revision

Table 5-6. Output Response - Info Revision

Name	Response	Description
Response	00 00 60 vv	Revision Info. 0x60 indicated ATECC608B-TNGLoRaWAN. vv is the most recent silicon version.



Notice: The Output Response for the ATECC608A devices will be 0x00 0x00 0x60 0x02. The response for the ATECC608B devices will be 0x00 0x00 0x60 0x03. The device revision is the easiest way to determine which version of silicon you have. Over time the fourth byte for the ATECC608B could change if additional silicon enhancements are implemented.

5.1.2.2 Info - Device State

The current status of the device is returned with the `Info` command in this mode. The Status bits are useful in determining the current state of the device and may be useful in determining why a given command fails or if a command can be executed.

Table 5-7. Input Parameters - Info Device State

Opcode (1 Byte)	Mode (1 Byte)	Param (2 Bytes)	Data (0 Bytes)	Description
0x30	0x02	0x00 00	—	Returns device state

Table 5-8. Output Response - Info Device State

Name	Response	Description
Response	0x00 00 Byte[1] Byte[0]	

Table 5-9. Status Flags

Byte #	Bit #	Name	Description
0	7	TempKey.NoMacFlag	0: NoMacFlag is invalid 1: NoMacFlag is valid
	6	TempKey.GenKeyData	0: GenKeyData is invalid 1: GenKeyData is valid
	5	TempKey.GenDigData	0: GenDigData is invalid 1: GenDigData is valid
	4	TempKey.SourceFlag	0: TempKey is fixed source 1: Temp Key is from random source
	3:0	TempKey.KeyID	TempKey Key SlotID
1	7	TempKey.Valid	0: TempKey is not valid 1: TempKey is valid
	6:3	AuthComplete.KeyID	Authorization Key SlotID
	2	AuthComplete.Valid	0: Authorization invalid 1: Authrorization valid
	1:0	Unused	2 ⁿ b00

5.1.3 Lock Command

For the ATECC608B-TNGLoRaWAN, the Configuration zone has already been locked and the access policies of the Data zone have already been enforced. However, several of the data slots can still be updated through the use of other commands. If so desired, some of these slots can be permanently locked from future updates by using the Slot Locking mode of the `Lock` command.

5.1.3.1 SlotLock

The Slot Lock mode of the `Lock` command is used to individually lock slots. Any slot that has the Lockable bit set and has not previously been slot-locked can be locked to prevent any further updates. This process is not reversible. Once a slot has been locked, it is permanently locked. In this mode of operation, the Summary CRC and Data fields are ignored.

For the ATECC608B-TNGLoRaWAN, the following individual slots may be locked: Slots 8, 10 and 14.

Table 5-10. SlotLock Input Parameters

Opcode (1 Byte)	Mode(1 Byte)	Summary CRC (2 Bytes)	Data (0 Bytes)	Description
0x17	8'b00[bb_bb]10 ⁽¹⁾	0x00 00	—	Individual Slot Lock

Note: 1 - [bb_bb] Indicates the 4-bit value that represents the slot being locked.

Table 5-11. Slot Lock Output

Name	Size	Description
Response	1 byte	0x00 if the command successfully locks the slot. An error code will output if the command fails.

5.1.4 Nonce Command

The `Nonce` command generates a nonce (number used once) for use by a subsequent command by combining a random number (which can be generated internally or externally) with an input value from the system. The resulting nonce is stored internally in three possible buffers: TempKey, Message Digest Buffer, and Alternate Key Buffer. Instead of generating a nonce, a value may be passed to the device if so desired.

5.1.4.1 Nonce - Random

When the `Nonce` command is run in Random mode, it generates a new nonce based on the input values shown in the tables below. If Param2 is 0x00 00, then a new random number is generated based on the internal RNG. If Param2 is 0x80 00, a value stored in TempKey is used to generate a new nonce instead and the random number generator is not run. TempKey must be valid prior to running the `Nonce` command in this case. Upon completion, the TempKey.SourceFlag is set to Rand.

It is recommended that the 20 bytes of data sent to the device be generated from a random source to prevent replay attacks.

Table 5-12. Random Nonce Input Parameters

Opcode	Mode	Param2	Data	Description
0x16	0x00 or 0x01	0x00 00	20 bytes	<ul style="list-style-type: none"> 32 bytes written to TempKey Output is from the RNG SHA256 digest includes the random number
	0x00 or 0x01	0x80 00	20 bytes	<ul style="list-style-type: none"> 32 bytes written to TempKey Output is the SHA256 Hash value SHA256 digest includes the TempKey

Table 5-13. Random Nonce Output Response

Name	Input Param2	Size	Description
Response	0x00 00	32 bytes	Random number
	0x80 00	32 bytes	New TempKey value

Notes:

- TempKey.SourceFlag set to '0' on successful completion of the command indicating the nonce value was random source.
- TempKey.Valid set to '1' on success.

Table 5-14. Nonce SHA256 HASH Calculation

# of Bytes	Input Data Param2 = 0x00 00	Input Data Param2 = 0x80 00
32	RandOut from random number generator	TempKey value from previous command
20	NumIn from input stream	NumIn from input stream
1	Opcode (always 0x16)	Opcode (always 0x16)
1	Mode (0x00 or 0x01)	Mode (0x00 or 0x01)

.....continued		
# of Bytes	Input Data Param2 = 0x00 00	Input Data Param2 = 0x80 00
1	LSB of Param2 (always 0x00)	LSB of Param2 (always 0x00)

5.1.4.2 Nonce - Fixed

A fixed nonce is passed to the device and stored in one of the internal buffers. The size of the nonce may be either 32 or 64 bytes. The TempKey.SourceFlag is always set to input after this command is run. This mode of the Nonce command does not run a SHA256 calculation or generate a random number.

Table 5-15. Fixed Nonce Input Parameters

Opcode	Mode	Param2	Data	Description
0x16	0x03 0x43 0x83	0x00	32 bytes	<ul style="list-style-type: none"> 32 bytes written to TempKey 32 bytes written to Message Digest Buffer 32 bytes written to Alternate Key Buffer
	0x23 0x63	0x00	64 bytes	<ul style="list-style-type: none"> 64 bytes written to TempKey 64 bytes written to Message Digest Buffer

Table 5-16. Fixed Nonce Output Response

Name	Size	Description
Response	1 byte	0x00 if the command is completed successfully. Otherwise an error code is received.

Notes:

- TempKey.SourceFlag is set to '1' upon successful command completion, indicating nonce value was fixed input value.
- TempKey.Valid is set to '1', indicating the value is valid for other use.

5.1.5 Random Command

The Random command generates a random number to be used by the system. Random numbers are generated via the internal NIST 800-90 A/B/C random number generator. The output of the command is always a 32-byte number placed on the bus. The number cannot be stored in any data slot or SRAM location.

Table 5-17. Input Parameters - Random

OpCode (1 Byte)	Mode (1 Byte)	Param2 (2 Bytes)	Data (0 Bytes)	Description
0x1B	0x00	0x00 00	—	Random command

Table 5-18. Output Response - Random

Name	Size	Description
RandOut	32 bytes	The output of the RNG

5.1.6 Read Command

The Read command can be used to access any of the EEPROM zones of the ATECC608B-TNGLoRaWAN device. Data zone access is limited based on the access policies set for each of the slots. Encrypted reads are possible only on the Data zone slots if specific access policies are set.

5.1.6.1 Clear Text Read

Clear text reads are always possible from the Configuration and OTP zones of the ATECC608B-TNGLoRaWAN device. Specific slots within the Data zone may be readable as clear text based on the access policies that have been set. Either 4-byte or 32-byte reads are possible on any of these zones.

For the ATECC608B-TNGLoRaWAN device, Slots 8 and 10-14 contain data that can be read as clear text.

Table 5-19. Input Parameters - Clear Text Read

Opcode (1 Byte)	Mode (1 Byte)	Address (2 Byte)	Description
0x02	0x00	See Section 4.4 Address Encoding .	4-byte Configuration zone read
	0x80	See Section 4.4 Address Encoding .	32-byte Configuration zone read
	0x01	See Section 4.4 Address Encoding .	4-byte OTP zone read
	0x81	See Section 4.4 Address Encoding .	32-byte OTP zone read
	0x02	See Section 4.4 Address Encoding .	4-byte Data zone read
	0x82	See Section 4.4 Address Encoding .	32-byte Data zone read

Table 5-20. Output Response - Clear Text Read

Name	Size	Description
Data Contents	4 bytes	4 bytes transmitted [0:3]
	32 bytes	32 bytes transmitted [0:31]

5.1.6.2 Encrypted Read

Encrypted reads are only possible on Data zone slots that have the access policies set for an encrypted read. Data in the Configuration zone and OTP zone can never be encrypted. All encrypted reads must be 32 bytes in length. Prior to doing the encrypted read an encryption key must be generated. This key can be unique every time an encrypted read is done on a given slot. Note that in order to read all of the contents of a slot, multiple reads may be required. A unique session key will need to be generated for each encrypted read.

For the ATECC608B-TNGLoRaWAN device, Slots 2-7 and 11-12 require an encrypted read.

Procedure for an Encrypted Read

The following steps are required for each encrypted read:

1. Run the `Nonce` command. It is recommended that this be done in Random mode, 32 bytes. Output the value to `TempKey`.
2. Run the `GenDig` command. The Slot # of the Encryption key must be included in the `GenDig` Input parameters, as well as the output of the `Nonce` command which is stored in `TempKey`.
Note: The output of these two commands is the encryption key and is stored in `TempKey`.
3. Issue the `Read` command.
 - The contents of the Data zone slot will be encrypted by XOR'ing the data with the generated value stored in `TempKey`. This value in `TempKey` is the session key that was previously generated.
 - The output of the command will be the encrypted data.

Table 5-21. Input Parameters - Encrypted Read

Opcode (1 Byte)	Mode (1 Byte)	Address (2 Byte)	Description
0x02	0x82	See Section 4.4 Address Encoding	32-byte Data zone read

Table 5-22. Output Response - Encrypted Read

Name	Size	Description
Data Contents	32 bytes	32 bytes of encrypted data [0:31]

The host system must also calculate the Encryption/Decryption key based on the output of the `Nonce` command and the SHA256 calculation used in the `GenDig` command. This allows for the host system to decrypt the data being sent.

5.1.7 SelfTest Command

The `SelfTest` command performs a test of one or more of the cryptographic engines within the ATECC608B-TNGLoRaWAN chip. Some or all of the algorithms will be tested depending on the Input mode parameter.

For the ATECC608B-TNGLoRaWAN device, the `SelfTest` command has been disabled from running automatically after a Power-up or Wake event. However, the command may be executed by the system if so desired. There is no requirement to run this test.

If any self test fails, whether called automatically on power-up, wake or via this command, the chip will enter a Failure state, in which chip operation is limited. The stored Failure state is always cleared upon a wake or power cycle. Note that the self-test failure (error code: 0x07) is not the same as a health-test failure (error code: 0x08).

When in the Failure state, the following operations are allowed:

- Reads of the Configuration zone.
- This self-test command. If a particular test is re-run and passes on the subsequent attempt, that bit in the Failure register will be cleared. If all bits are cleared, then ATECC608B-TNGLoRaWAN resumes normal command operation.
- The current state of the Failure register can be read by calling this self-test command with a mode parameter of 0.
- Any other command or reads of any other zone, will return an error code of 0x07. Use `SelfTest(0)` to determine the cause of the failure

Table 5-23. Input Parameters Self Test

Opcode (1 Byte)	Mode (1 Byte) ¹							Param2 (2 Bytes)
	b[7:6]	b[5]	b[4]	b[3]	b[2]	b[1]	b[0]	
2'b00	SHA	AES	ECDH	ECDSA (Sign, Verify)	0	RNG, DRBG	0x00 00	

Note:

1. Any combination of tests can be run at one time. Setting the corresponding mode bit to '1' indicates that the test will be run. If the bit is '0', then the test will not be run.

Table 5-24. Output Response Self Test

Name	Size	Description
Success	1 byte	0x00 - All Tests Passed Failure Map - one for each test that failed. Failure bits align with bits in Mode byte.

5.1.8 SHA Command

The `SHA` command computes a SHA-256 or HMAC/SHA digest for general purpose use by the host system. The SHA computation is performed in a special section of internal ATECC608B-TNGLoRaWAN memory (Context Buffer) that is not read nor written by any other commands. Any arbitrary command can be interspersed between the various phases of the `SHA` command without problems. This SHA context is invalidated on power-up and wake. In most cases, if an error occurs during the execution of the `SHA` command, the context is retained without change.

5.1.8.1 SHA - SHA256 Digest

The `SHA` command utilizes the SHA256 Hash algorithm for computing the hash of a message. The primary input to the command is the actual message. The message is submitted to the device in blocks of 1 to 64 bytes. The following procedure is used when no context switching is required:

1. Issue the `SHA` command in Start mode. No message is included.
2. Issue the `SHA` command in Update mode with 1 to 64 bytes of the message.
3. Repeat step 2 until the total number of bytes of the message have been submitted.
4. Issue the `SHA` command in End mode to complete the SHA256 calculation.

Table 5-25. Input Parameters SHA Standard Mode

Opcode (1 Byte)	Mode (1 Byte)	Param2 (2 Bytes)	Data (Varies by Mode)	Description
0x47	0x00	0x00 00	0 bytes	Start mode
	0x01	0x00 [ByteCount]	1 to 64 bytes	Update mode
	0x02	0x00 [ByteCount]	0 to 64 bytes	Finalize mode: Digest placed in Output Buffer and TempKey
	0x42	0x00 [ByteCount]		Finalize mode: Digest placed in Output Buffer and Message Digest Buffer
	0xC2	0x00 [ByteCount]		Finalize mode: Digest placed in Output Buffer only

Table 5-26. Output Response SHA256 Standard

Name	Mode	Size	Description
Response	0x00, 0x01	1 byte	0x00 if successful, otherwise an error code is received
	0x02, 0x42, 0xC2	1 byte 32 bytes	If error code SHA256 Digest

5.1.8.2 SHA - HMAC Digest

The `SHA` command may be used to calculate an HMAC Digest instead of an SHA256 Digest. The procedure is essentially the same but requires the use of an internal key and the use of `HMAC_START` instead of `START`.

The following procedure is used when no context switching is required:

1. Issue the `SHA` command in `HMAC_Start` mode with key location indicated. No message is included.
2. Issue the `SHA` command in Update mode with 1 to 64 bytes of the message.
3. Repeat step 2 until the total number of bytes of the message has been submitted.
4. Issue the `SHA` command in End mode to complete the HMAC Digest calculation.

Table 5-27. Input Parameters SHA HMAC Mode

Opcode (1 Byte)	Mode (1 Byte)	Param2 (2 Bytes)	Data (Varies by Mode)	Description
0x47	0x04	0x00 0[slot]	0 bytes	HMAC Start mode and include a key from a data slot
	0x04	0xFF FF	0 bytes	HMAC Start mode and include a key from TempKey
	0x01	0x00 [ByteCount]	1 to 64 bytes	Update mode
	0x02	0x00 [ByteCount]	0 to 64 bytes	Finalize mode: Digest placed in Output Buffer and TempKey
	0x42	0x00 [ByteCount]		Finalize mode: Digest placed in Output Buffer and Message Digest Buffer
	0xC2	0x00 [ByteCount]		Finalize mode: Digest placed in Output Buffer only

Table 5-28. Output Response SHA256 Standard

Name	Mode	Size	Description
Response	0x04, 0x01	1 byte	0x00 if successful, otherwise an error code is received
	0x02, 0x42, 0xC2	1 byte 32 bytes	If Error Code HMAC Digest upon success

5.1.8.3 SHA - Context Switching

Context switching allows for the generation of a digest to be interrupted to do other functions or to generate other digests. Context switching can be used only in the SHA256 Digest mode, so it can only occur after a SHA Start has been issued and prior to a SHA `Finalize` command. Context switching may happen multiple times during the course of a digest generation.

Context switching involves two phases:

1. `Read_Context` - Reads a variable length context from the ATECC608B-TNGLoRaWAN while leaving the context valid within the chip. The total length of the output data parameter is always from 40 to 99 bytes and can either be determined from the length field in the output packet or computed as 40 plus the Least Significant six bits of the first byte in the output.
2. `Write_Context` - Writes a SHA256 context from the host to the ATECC608B-TNGLoRaWAN to allow subsequent update operations to be completed. This context must have previously been read from the chip with the `Read_Context` mode. The ATECC608B-TNGLoRaWAN determines the size of the context from the first 4 bytes of the data parameter.

After the context has been read, the device may perform any other operations as required. Upon completion of the other operations, the context may be written back to the ATECC608B-TNGLoRaWAN and the SHA256 Digest generation process may continue until it has completed.

Table 5-29. Input Parameters SHA Context Switching

Opcode (1 Byte)	Mode (1 Byte)	Param2 (2 Bytes)	Data (Varies by Mode)	Description
0x47	0x06	0x00 00	0 bytes	Read the current context
	0x07	0x00 [ByteCount]	40 to 99 bytes	Restore the current context from the prior session

Table 5-30. Output Response SHA Context Switching

Name	Mode	Size	Description
Response	0x06	1 byte 40-99 bytes	If error code context value
	0x07	1 byte	0x00 if successful, otherwise an error code is received

5.1.9 UpdateExtra Command

The `UpdateExtra` command is used to update the `UpdateExtra` and `UpdateExtraAdd` bytes, bytes 84 and 85 respectively, in the Configuration zone. These bytes can only be updated by this command. These bytes are one-time updatable bytes and can only be updated if the current value is 0x00. Trying to update this byte if the value is not 0x00 will result in an error.

For the ATECC608B-TNGLoRaWAN device, the `UpdateExtraAdd` byte (byte 85) has been configured to be an alternate I²C address.

Table 5-31. Input Parameters - UpdateExtra

OpCode (1 Byte)	Mode (1 Byte)	Param2 (2 Bytes)	Data (0 Bytes)	Description
0x20	0x00	0x00 [Value]	—	Write the <code>UpdateExtra</code> byte (byte 84) with the value in the LSB of <code>Param2</code> .
—	0x01	0x00 [Value]	—	Write the <code>UpdateExtraAdd</code> byte (byte 85) with the value in the LSB of <code>Param2</code> .

Table 5-32. Output Response - UpdateExtra

Name	Size	Description
Success	1 byte	0x00 - The byte is written successfully. An error code is received if the byte is not written successfully.

5.1.10 write Command

For the ATECC608B-TNGLoRaWAN, the Configuration and OTP zones have been locked and no updates to these zones are possible. Limited write capability exists on the Data zone based on access policies of each slot. Slots that can be written are described in the submodes of this command.

5.1.10.1 Data Zone - Clear Text Write

Standard Clear Text Writes

Clear text writes to Data zone slots are only possible for slots so configured provided they have not been `SlotLocked`. Note that any given slot may allow for more than one block of data to be written to it based on the size of the slot. 4 or 32-byte writes are permissible for any block within a slot provided that slot is not secret. For secret slots only 32 byte writes are permitted. The last block of any slot will not be 32 bytes. This can still be written as a 32-byte write and the additional bytes need to be padded with zeros. For the ATECC608B-TNGLoRaWAN device, Slots 2-7, 8-12 and 14 can be written as clear text.

Table 5-33. Clear Text Write Input Parameters

Opcode (1 Byte)	Mode (1 Byte)	Address (2 Bytes)	Data (4 or 32 Bytes)	Description
0x12	0x02	See Section 4.4 Address Encoding	4 bytes	4-byte write
	0x82	See Section 4.4 Address Encoding	32 bytes	32-byte write

Table 5-34. Clear Text Write Output Response

Name	Size	Description
Response	1 byte	If successful, it will return a value of 0x00. If unsuccessful, then an error code will be returned.

5.1.10.2 Data Zone - Encrypted Write

Writes to the Data zone may be encrypted if the slots have been so configured. Only data written to the Data zone may be encrypted. For the ATECC608B-TNGLoRaWAN device, Slot 13 can be written as encrypted text.

All encrypted writes must be done as 32-byte blocks. If a partial block at the end of the zone needs to be encrypted 32 bytes of input, data must still be sent and used as part of the MAC calculation. The address of the write is an actual memory location address and is not a Data slot number.

Table 5-35. Input Parameters - Encrypted Write

Opcode (1 Byte)	Mode (1 Byte)	Address (2 Bytes)	Input Data (32 Bytes)	MAC (32 Bytes)	Description
0x12	0x82	See Section 4.4 Address Encoding	32 bytes of encrypted input data	32 bytes of MAC	32-byte encrypted write

Table 5-36. Output Response - Encrypted Write

Name	Size	Description
Response	1 byte	If successful, it will return a value of 0x00. If unsuccessful, then an error code will be returned.

Data Encryption

Data must be encrypted by the host system prior to writing the data to the slot. The encryption algorithm simply XOR's the clear text data with the value stored in the TempKey. TempKey must be a result of a `GenDig` command. The host system will need to calculate this value that will be used in parallel with what the ATECC608B-TNGLoRaWAN calculates. The `GenDig` command can be used one or more times when calculating the XOR value. The final value will be the actual XOR value used for the encryption. Once the data are encrypted and written, the ATECC608B-TNGLoRaWAN decrypts the value with the value stored in TempKey. The encrypted write must occur before any other commands that can affect the TempKey value or before a time-out occurs. In order to validate the encrypted write, a 32-byte MAC value must also be sent with the command.

Input MAC Generation

The required Input MAC is generated by a SHA256 Hash over 96 bytes. This is calculated by the host system and sent as part of the encrypted `Write` command.

32 bytes	TempKey
1 byte	OpCode = 0x12
1 byte	Mode
2 bytes	Address (LSB, MSB)
1 byte	SN[8] = Varies by vendor
2 bytes	SN[0:1]=0x01 0x23
25 bytes	Zeros
32 bytes	Plain Text Data

5.2 Asymmetric Cryptography Commands

The Asymmetric Cryptography command set is made up of those commands that are specifically used to generate or use ECC keys. Keys are typically stored in Data zone slots, but for some commands could also be in the SRAM array.

Table 5-37. Asymmetric Cryptography Commands

Command Name	Opcode	Description
ECDH	0x43	Generates an ECDH pre-master secret using the stored private key and input public key.
GenKey	0x40	Generates an ECC private key or optionally generates an ECC public key from the stored private key.
Sign	0x41	Signs an internal or external message digest using an ECC private key with an ECDSA signature calculation.
Verify	0x45	Verifies an internal or external message digest using an ECC public key with an ECDSA verify calculation.

5.2.1 ECDH Command

The ECDH command is used to generate a shared secret between two devices. By passing an ECC public key from another device and combining with the ECC private key stored in a slot or with an ephemeral key stored in TempKey and doing the reverse on the other device, both devices will generate the same shared master secret. This can then be further combined with other common data in both sides to generate a shared session key between the devices. The KDF command is often used with TLS sessions to further diversify the shared secret.

5.2.1.1 ECDH - Stored Key

The ECDH command may use an internal data slot as its ECC private key source. The slot must have its access policies configured such that the slot is an ECC private key and that the ECDH command is allowed. Access policies may also specify whether or not the output will be stored, encrypted or allow the command itself to determine whether the output is stored or encrypted. The IO protection key is used when encryption is required. Encryption can only occur when data is output to the output buffer.

For the ATECC608B-TNGLoRaWAN, the ECDH command may be run using the ECC private keys stored in Slot 1.

Table 5-38. Input Parameters ECDH Stored Key

Opcode (1 Byte)	Mode (1 Byte)	KeyId (2 Bytes)	Data		Description
			Data 1 (32 Bytes)	Data 2 (32 Bytes)	
0x43	0x0C	0x00 0[Slot]	X component of public key	Y component of public key	<ul style="list-style-type: none"> Results go to the output buffer Output is in the clear⁽¹⁾
	0x0E	0x00 0[Slot]	X component of public key	Y component of public key	<ul style="list-style-type: none"> Results go to the output buffer Output is encrypted
	0x08	0x00 0[Slot]	X component of public key	Y component of public key	<ul style="list-style-type: none"> Results stored in TempKey Output is available for other operations but is not directly accessible.

Note:

- When the ChipOptions.ECDHPROT value is 1, then the output of the ECDH command will be encrypted in this mode. For the ATECC608B-TNGLoRaWAN the ECDHPROT field is set to 0 and encryption will be dependent upon the mode of the ECDH command.

Table 5-39. Output Response ECDH Stored Key

Name	Mode	Size	Description
Response	0x0C or 0x0E	1 byte	Error code if command fails

.....continued

Name	Mode	Size	Description
Response	0x0C	32 bytes	Shared Master Secret as clear text
Response OutNonce	0x0E	32 bytes 32 bytes	Shared Master Secret as encrypted text nonce used for encryption
Response	0x08	1 byte	0x00 if successful, otherwise an error code is returned

5.2.1.2 ECDH - TempKey Source

The ECDH command may use the value in TempKey as its starting value for an ECDH command. The ECC private key value in TempKey must be generated by the GenKey command. Once the TempKey has been used by the ECDH command, the TempKey.Valid flag is reset. If the output is back to the TempKey location, then this flag will be set again.

Table 5-40. Input Parameters ECDH TempKey

Opcode (1 Byte)	Mode (1 Byte)	KeyId (2 Bytes)	Data		Description
			Data 1 (32 Bytes)	Data 2 (32 Bytes)	
0x43	0x0D	0x00 00	X component of public key	Y component of public key	<ul style="list-style-type: none"> Results sent to the output buffer Output is in the clear⁽¹⁾
	0x0F	0x00 00	X component of public key	Y component of public key	<ul style="list-style-type: none"> Results sent to the output buffer Output is encrypted
	0x09	0x00 00	X component of public key	Y component of public key	<ul style="list-style-type: none"> Results stored in TempKey Output is available for other operations but is not directly accessible.
	0x05	0x00 0[Slot]	X component of public key	Y component of public key	<ul style="list-style-type: none"> Results stored in specified slot

Note:

- When the ChipOptions.ECDHPROT value is 1, then the output of the ECDH command will be encrypted in this mode. For the ATECC608B-TNGLoRaWAN the ECDHPROT field is set to 0 and encryption will be dependent upon the mode of the ECDH command.

Table 5-41. Output Response ECDH TempKey

Name	Mode	Size	Description
Response	0x0D or 0x0F	1 byte	Error code if command fails
Response	0x0D	32 bytes	Shared Master Secret as clear text
Response OutNonce	0x0F	32 bytes 32 bytes	Shared Master Secret as encrypted text nonce used for encryption
Response	0x05 or 0x09	1 byte	0x00 if successful, otherwise an error code is returned

5.2.2 GenKey Command

The `GenKey` command is used to generate ECC private keys, ECC public keys from private keys or generate a public key digest. This command is only applicable for those slots designated to be ECC private or public keys. Running this command on a non-ECC slot will result in an error.

5.2.2.1 Private Key - Stored in TempKey

The `GenKey` command can be used to generate an ephemeral ECC private key and place it in SRAM where there is no limit on writing to a memory location. This key cannot be read out but may be used by the `ECDH` command.

Table 5-42. Command Parameters

Opcode (1 Byte)	Mode (1 Byte)	KeyID (2 Bytes)	OtherData (3 Bytes)	Comment
0x40	0x04	0xFF FF	0x00 00 00	<ul style="list-style-type: none"> Private key stored in TempKey Public key generated and output on the bus

Table 5-43. Output Response GenKey Stored in TempKey

Name	Size	Response
Response	1 byte	If an ECC Fault code has been generated due to a command error
	64 bytes	Public keys X and Y coordinate the command's success

5.2.2.2 Public Key Generation

If the slot has been so configured, the ECC public key can be regenerated from a stored ECC private key and output on the bus. In addition, if so desired, a public key digest can also be generated and stored in TempKey at the same time.

For the ATECC608B-TNGLoRaWAN, the public key can be generated from the stored private key in Slot 1. Optional digest generation is also allowed.

Table 5-44. Input Parameters - Public Key Generation

Opcode (1 Byte)	Mode (1 Byte)	KeyID (2 Bytes)	OtherData (0 Bytes)	Description
0x40	0x00	0x00 0[Slot]	—	Public key generated and output on the bus
0x40	0x08	0x00 0[Slot]	—	<ul style="list-style-type: none"> Public key generated and output on the bus Public key digest generated and stored in TempKey

Table 5-45. Output Response - Public Key Generation

Name	Size	Response
Response	1 byte	ECC Fault code if command fails
	64 bytes	Public keys X and Y coordinate the command's success

Public Key Digest Generation

A SHA256 Hash is performed over 128 bytes to generate a digest from the public key.

32 bytes	TempKey
1 byte	OpCode
1 byte	Param1
2 bytes	Param2
1 byte	SN[8]
2 bytes	SN[0:1]
25 bytes	Zeros
64 bytes	X and Y coordinates of the public key

5.2.2.3 Public Key Digest Generation

A digest of a public key may be generated from a stored ECC public key and stored in TempKey. The Slot# must point to a stored public key, therefore this command is limited to Slots 8 and higher. Prior to running this command, the TempKey must be a valid value. The public key will not be output on the bus. The public key could however be read out using the `Read` command. Note that in this mode the 3 bytes in OtherData will be used to generate the digest and the mode and KeyID bytes will be ignored.

For the ATECC608B-TNGLoRaWAN, a digest can be created from Slot 1.

Table 5-46. Input Parameters - Public Key Digest Generation

Opcode (1 Byte)	Mode (1 Byte)	KeyID (2 Bytes)	OtherData (3 Bytes)	Comment
0x40	0x10	0x00 0[Slot]	0x[any value]	Public key digest is created and stored in TempKey

Table 5-47. Output Response - Public Key Digest Generation

Name	Size	Response
Response	1 byte	<ul style="list-style-type: none"> • 0x00 if command completes successfully • ECC Fault code if command fails

Public Key Digest Creation

A SHA256 Hash is performed over 128 bytes to generate a digest from the public key.

32 bytes	TempKey
1 byte	OpCode
1 byte	OtherData[0]
2 bytes	OtherData[1:2]
1 byte	SN[8]
2 bytes	SN[0:1]
25 bytes	Zeros
64 bytes	X and Y coordinates of the public key

5.2.3 Sign Command

The `Sign` command generates a signature using the ECDSA algorithm. The ECC private key in the slot specified by KeyID is used to generate the signature. Only External messages can be signed by the ATECC608B-TNGLoRaWAN device.

5.2.3.1 Sign - External Message

The `Sign` command can be used to sign the digest of an external message by an ECC private key. The message must be compiled and the digest of the message generated by the host system. The message can be loaded into either the TempKey or Message Digest Buffer via the `Nonce` command run in fixed mode and is always 32 bytes in length. The message always resides in the lower 32 bytes of these locations.

For the ATECC608B-TNGLoRaWAN device, Slot 1 is enabled to sign external messages.

Table 5-48. Input Parameters - Sign External

Opcode (1 Byte)	Mode (1 Byte)	KeyId (2 Bytes)	Description
0x41	0x80 or 0xC0	0x00 0[Slot]	External message digest stored in TempKey
	0xA0 or 0xD0	0x00 0[Slot]	External message digest stored in Message Digest Buffer

Table 5-49. Output Response - Sign External

Name	Size	Description
Response	1 byte	Error code if the command fails
	64 bytes	The signature composed of R and S values

5.2.4 Verify Command

The `Verify` command takes an ECDSA [R,S] signature and verifies that it is correctly generated given an input message digest and public key. In all cases, the signature is an input to the command.

An optional MAC can be returned from the `Verify` command to defeat any man-in-the-middle attacks. If the verify calculation shows that the signature is correctly generated from the input digest, then a MAC will be computed based on an input nonce stored in TempKey and the value of the IO protection secret which is stored in both the ATECC608B-TNGLoRaWAN and the host MCU. MAC outputs can only be generated in External and Stored modes. The IO protection function must be enabled for MAC computation.

5.2.4.1 Verify - External Public Key Mode

The `Verify` command may be used to verify a message generated externally to the ATECC608B-TNGLoRaWAN with a public key that is passed to the command. The output of the command will either be a code indicating success, failure or error or a 32-byte MAC. Prior to this command being run, the message should be written using the `Nonce` command in Fixed mode to either TempKey or the Message Digest Buffer. In this mode, the device merely accelerates the public key computation and returns a boolean result.

Procedure to Verify a Message with an External Public Key

- Write the 32-byte digest of the message to either the TempKey or Message Digest Buffer using the `Nonce` command in Fixed mode.
- Optional: System Nonce - Nonce generated by the system.
 - If the external message digest is stored in TempKey, the nonce generated by the system must be stored in the lower 32 bytes of the Message Digest Buffer.
 - If the external message is stored in the MessageDigestBuffer[31:0], then the System Nonce must be stored in the upper 32 bytes of the MessageDigest Buffer[63:32]. To do this, the external message and nonce value should be written as a 64-byte value.
- Issue the `Verify` command. Include the Mode, KeyID, which specifies the P256 ECC Curve, the 64-byte signature and the 64-byte external public key.
- The output will return:
 - One byte success, fail or error code if MAC is not required.
 - A 32-byte MAC if specified by the mode.

Table 5-50. Command Parameters

Opcode (1 Byte)	Mode (1 Byte)	Key ID (2 Bytes)	Data Field (128 Bytes)		Comment
			Signature (64 Bytes)	Public Key (64 Bytes)	
0x45	0x02	0x00 04	R value S value	X value Y value	Message stored in TempKey
	0x22	0x00 04	R value S value	X value Y value	Message stored in Message Digest Buffer
	0xA2	0x00 04	R value S value	X value Y value	<ul style="list-style-type: none"> Message stored in TempKey System Nonce stored in MDB[31:0] Validation MAC is returned
	0x82	0x00 04	R value S value	X value Y value	<ul style="list-style-type: none"> Message stored in Message Digest Buffer System Nonce stored in MDB[63:32] Validation MAC is returned

Table 5-51. Output Response - Verify External

Name	Mode	Size	Response
Response	0x02 or 0x22	1 byte	<ul style="list-style-type: none"> 0x00 - If signature is verified 0x01 - If signature does not match Error code - If there is a failure due to some other reason
	0x82 or 0xA2	1 byte or 32 bytes	<ul style="list-style-type: none"> Validation MAC - If signature is verified 0x01 - If signature does not match Error code - If there is a failure due to some other reason

Table 5-52. Validation MAC - Verify External

Size (Bytes)	Message in TempKey	Message in Message Digest Buffer
32	Contents of the IO protection key	Contents of the IO protection key
32	Message stored in TempKey	Message stored in the first 32 bytes of the Message Digest Buffer
32	System Nonce stored in the first 32 bytes of the Message Digest Buffer	System Nonce stored in the second 32 bytes of the Message Digest Buffer
32	R Data of the passed signature	R Data of the passed signature
32	S Data of the passed signature	S Data of the passed signature
1	Opcode	Opcode
1	Mode	Mode
2	Param2 [LSB,MSB]	Param2 [LSB,MSB]

5.2.4.2 Verify - Stored Public Key Mode

When using the `Verify` command in Stored mode, the public key to be used is stored in a data slot and does not need to be passed. Prior to this command being run, the message should be written to TempKey or the Message Digest Buffer using the `Nonce` command.

Procedure to Verify a Message with a Stored Key

1. If so required, validate the public key before using the `Verify` command.
2. If so required, authorize the public key before use.
3. Write the 32-byte digest of the message to either the TempKey or Message Digest Buffer using the `Nonce` command in Fixed mode.
4. Write the System Nonce to either the lower or upper 32 bytes of the Message Digest Buffer.
 - 4.1. If TempKey contains the message digest, then store the System Nonce in the lower 32 bytes of the Message Digest Buffer.
 - 4.2. If the message digest is stored in the lower 32 bytes of the Message Digest Buffer, then store the System Nonce in the upper 32 bytes of the Message Digest Buffer. The user needs to write both the message digest and the System Nonce at one time using the `Nonce` command.
5. Issue the `Verify` command. Include the Mode, KeyID, which specifies the public key slot, the 64-byte signature and the slot # of the internal public key.
6. The output will return:
 - 6.1. One byte success, fail or error code if MAC is not required.
 - 6.2. A 32-byte MAC, if specified by the mode or an error code, if the command fails.

Table 5-53. Command Parameters

Opcode (1 Byte)	Mode (1 Byte)	Public Key (2 Bytes)	Data Field (64 Bytes)	Comment
			Signature (64 Bytes)	
0x45	0x00	0x00, 0[Slot]	R value S value	- Message stored in TempKey
	0x20	0x00, 0[Slot]	R value S value	- Message stored in Message Digest Buffer
	0x80	0x00, 0[Slot]	R value S value	- Message stored in TempKey Validation MAC is returned
	0xA0	0x00, 0[Slot]	R value S value	- Message stored in Message Digest Buffer Validation MAC is returned

Table 5-54. Output Response - Verify Stored

Name	Mode	Size	Response
Response	0x00 or 0x20	1 byte	<ul style="list-style-type: none"> • 0x00 - If signature is verified • 0x01 - If signature does not match • Error code - If there is a failure due to some other reason
	0x80 or 0xA0	32 bytes 1 byte	<ul style="list-style-type: none"> • Validation MAC - If signature is verified • 0x01 - If signature does not match • Error code - If there is a failure due to some other reason

Table 5-55. Validation MAC - Verify Stored

The validation MAC input locations vary based on where the message is stored.

Size (Bytes)	Message in TempKey	Message in Message Digest Buffer
32	Contents of the IO protection key	Contents of the IO protection key
32	Message from TempKey	First 32 bytes message from the Digest Buffer

.....continued

Size (Bytes)	Message in TempKey	Message in Message Digest Buffer
32	System Nonce in the first 32 bytes of the Message Digest Buffer	System Nonce stored in the second 32 bytes of the Message Digest Buffer
32	R Data of the passed signature	R Data of the passed signature
32	S Data of the passed signature	S Data of the passed signature
1	Opcode	Opcode
1	Mode	Mode
2	Param2 [LSB,MSB]	Param2 [LSB,MSB]

5.3 Symmetric Cryptography Commands

The Symmetric Cryptography command set is made of up of those commands associated with the generation or use of symmetric keys. Keys are typically stored in Data zone slots, but for some commands, keys could also be generated and stored in some SRAM memory locations.

Table 5-56. Symmetric Cryptography Commands

Command Name	Opcode	Description
AES	0x51	Execute the AES-ECB Encrypt or Decrypt functions. Calculate a Galois Field Multiply.
CheckMac	0x28	Verify a MAC calculated on another CryptoAuthentication device.
DeriveKey	0x1C	Derive a target key value from the target or parent key.
GenDig	0x15	Generate a data digest from a random or input seed and a stored value.
KDF	0x56	Implement the PRF, AES or HKDF key derivation functions
MAC	0x08	Calculate digest (response) from key and other internal data using SHA-256.

5.3.1 AES Command

The AES Command can be used to encrypt and/or decrypt a 16-byte block of data utilizing an AES key. Note that the key is stored in a 16 Byte (128 bit) location with a given slot or within the first 16 bytes of TempKey. Multiple keys may be stored in a given slot and accessed in successive 16-byte boundaries, starting with 0-15 up to the size of the slot, but not exceeding four keys in any slot. For the ATECC608B-TNGLoRaWAN, the AES keys are stored in Slots 0, 2-7, and 11-12.

In addition to AES encryption and decryption, the AES command may be used to generate a Galois Field Multiply (GFM) in support of other cryptographic operations.

5.3.1.1 AES-ECB Encrypt

In the AES-ECB Encrypt mode, 16 bytes of clear text are expected in the input stream and the device will output 16 bytes of encrypted text.

Table 5-57. AES-ECB Encrypt

Opcode (1 Byte)	Mode (1 Byte)	KeyID (2 Bytes)	Data (16 Bytes)	Comments
0x51	0x00 0x40 0x80 0xC0	0x00 0[Slot]	Any 16 bytes of ClearText data	Encrypt key in Position 0 Encrypt key in Position 1 Encrypt key in Position 2 Encrypt key in Position 3
	0x00	0xFF FF	Any 16 bytes of ClearText data	Encryption key located in TempKey

Table 5-58. AES Encrypt Output Response

Name	Size (Bytes)	Notes
Response	1	If the operation fails, the output is a one byte error code.
	16	If the operation is successful, the device will output 16 bytes of encrypted text.

5.3.1.2 AES-GFM

The GFM operation is often used as part of various AES cryptographic operations. This function has been provided to aid in the creation of operations that are not directly supported by the ATECC608B-TNGLoRaWAN. The output of this operation can be used in the AES-GCM AEAD functionality. This mode does not involve secrets or anything stored on the chip. If this mode is selected, the remaining mode bits are ignored.

Table 5-59. AES Galois Field Multiply (GFM)

Opcode (1 Byte)	Mode (1 Byte)	KeyID (2 Bytes)	Data (32 Bytes)	Description
0x51	0x03	0x00 00	<ul style="list-style-type: none"> First 16 bytes - H-Field Second 16 bytes input data 	

Table 5-60. AES GFM Output Response

Name	Size (Bytes)	Notes
Response	1	If the operation fails, the output is a one-byte error code.
	16	If the operation is successful, the device will output 16 bytes result of the GFM calculation.

5.3.2 CheckMac Command

The `CheckMac` command calculates a MAC response that would have been generated on a different CryptoAuthentication™ (ATECC608B, ATECC508A, ATSHA204A) device and then compares the result with the input value. The command returns a boolean result to indicate the success or failure of the comparison.

If a value in `TempKey` is used as an input to the `CheckMac`, then a `Nonce` and/or `GenDig` command must be run prior to the `CheckMac` command.

Table 5-61. Input Parameters CheckMac

Opcode (1 Byte)	Mode (1 Byte) ⁽²⁾	KeyID (2 Bytes)	Data (77 Bytes) ⁽¹⁾	Description
0x28	0x00	0x00 0[Slot]	<ul style="list-style-type: none"> 32-byte client challenge 32-byte response generated by the client 13 bytes other data 	
	0x01	0x00 0[Slot]	<ul style="list-style-type: none"> 32 bytes ignored but must be present 32-byte client response 	Use if TempKey.SourceFlag was random
	0x05	0x00 0[Slot]	<ul style="list-style-type: none"> 13 bytes other data 	Use if TempKey.SourceFlag was fixed
	0x02	0x00 00	<ul style="list-style-type: none"> 32-byte client challenge 32-byte client response 	Use if TempKey.SourceFlag was random
	0x06	0x00 00	<ul style="list-style-type: none"> 13 bytes other data 	Use if TempKey.SourceFlag was fixed

Notes:

1. OtherData[0:12] values must match the values used in the original MAC command.
2. For modes other than 0x00, Mode[2] must match the TempKey.SourceFlag.

Table 5-62. Output Response CheckMac

Name	Size	Description
Response	1 byte	<ul style="list-style-type: none"> 0x00 - If successful 0x01 - If there is a mismatch Error Code - If there is a failure

Table 5-63. SHA256 CheckMac Hash

# of Bytes	Mode 0x00	Mode 0x01 or 0x05	Mode 0x02 or 0x06
32	Key[KeyID]	Key[KeyID]	TempKey
32	Input Client Challenge	TempKey	Input Client Challenge
4	OtherData[0:3]	OtherData[0:3]	OtherData[0:3]
8	Zeros	Zeros	Zeros
3	OtherData[4:6]	OtherData[4:6]	OtherData[4:6]
1	SN[8] = Varies by vendor	SN[8] = Varies by vendor	SN[8] = Varies by vendor
4	OtherData[7:10]	OtherData[7:10]	OtherData[7:10]
2	SN[0:1] = 0x01 0x23	SN[0:1] = 0x01 0x23	SN[0:1] = 0x01 0x23
2	OtherData[11:12]	OtherData[11:12]	OtherData[11:12]

5.3.3 DeriveKey Command

The device combines the current value of a key with the nonce stored in TempKey using SHA-256 and places the result into the target key slot. Specific bits of the Slot Configurations affect the way this command works.

- SlotConfig[TargetKey].Bit13 must be set or DeriveKey will return an error.
- DeriveKey always returns an error if KeyConfig indicates that the slot contains an ECC private key, if the Configuration zone has not been locked, or if the TargetKey slot is individually locked using SlotLocked.
- SlotConfig[TargetKey].Bit 12

- 0: The source key that will be combined with TempKey is the target key as specified in the command line (Roll Key operation)
- 1: The source key is the parent key of the target key, which is found in SlotConfig[TargetKey].WriteKey (Create Key operation).
- If SlotConfig[TargetKey].Bit15 is set, an input MAC must be present and have been computed as follows:
 - SHA-256(ParentKey, Opcode, Param1, Param2, SN[8], SN[0:1])

where the ParentKey ID is always SlotConfig[TargetKey].WriteKey.
- If performing a Roll Key operation and KeyConfig[TargetKey].ReqAuth is one, then the appropriate authorization must have been performed using KeyConfig[TargetKey].AuthKey prior to the execution of DeriveKey. If performing a Create Key operation and KeyConfig[ParentKey].ReqAuth is one, then the appropriate authorization must have been performed using KeyConfig[ParentKey].AuthKey prior to the execution of DeriveKey.

Prior to execution of this command, the Nonce command must have been run to create a valid nonce in TempKey. If KeyConfig.ReqRandom is one for the source key, this nonce must have been created with the internal RNG or an error will be returned. In all cases, Mode[2] must match the state of TempKey.SourceFlag or the command will return an error.

If performing a Roll Key operation and KeyConfig[TargetKey].ReqAuth is one, then the appropriate authorization must have been performed using KeyConfig[TargetKey].AuthKey prior to the execution of DeriveKey. If performing a Create Key operation and KeyConfig[ParentKey].ReqAuth is one, then the appropriate authorization must have been performed using KeyConfig[ParentKey].AuthKey prior to the execution of DeriveKey.

If an input MAC is required and KeyConfig[ParentKey].ReqAuth is one, then the appropriate authorization must have been performed using KeyConfig[ParentKey].AuthKey prior to the execution of DeriveKey.

If a parent key is involved in the operation (either SlotConfig[TargetKey].Bit12 or SlotConfig[TargetKey].Bit15 are set) and SlotConfig[ParentKey].LimitedUse is also set, DeriveKey returns an error if Counter[0] has reached its limit. DeriveKey always ignores LimitedUse for the target key.



If the source and target key are the same, then there is a risk of permanent loss of the key value if power is interrupted during the write operation. If the Configuration bits permit it, then the key value may be recovered using an authenticated and encrypted write based on the parent key.

For the ATECC608B-TNGLoRaWAN, the DeriveKey command can be run on Slot 0. Slot 13 is the parent key used for the key derivation and an authorizing MAC is always required.

Table 5-64. Input Parameters DeriveKey

Opcode (1 Byte)	Mode (1 Byte)	TargetKey (2 Bytes)	Data (0 or 32 Bytes)	Description
0x1C	0x00	0x00 0[Slot]	Optional MAC data	Use if TempKey Source was Random
	0x04	0x00 0[Slot]	Optional MAC data	Use if TempKey Source was fixed

Table 5-65. Output Response DeriveKey

Name	Size	Notes
Response	1 Byte	<ul style="list-style-type: none"> • 0x00 - If successful • Error code if there is a failure


The key written to the target slot is the result of SHA-256 of the following message:

Table 5-66. Generated Key from DeriveKey

# of Bytes	SlotConfig[12]=0	SlotConfig[12]=1
32	TargetKey	ParentKey
1	OpCode = 0x1C	OpCode = 0x1C
1	Mode	Mode
2	TargetKey	TargetKey
1	SN[8] = Varies by vendor	SN[8] = Varies by vendor
2	SN[0:1] = 0x01 0x23	SN[0:1] = 0x01 0x23
25	Zeros	Zeros
32	TempKey.Value	TempKey.Value

The data flow for this command is illustrated in [Figure 5-1](#).

Figure 5-1. Data Flow for DeriveKey Command

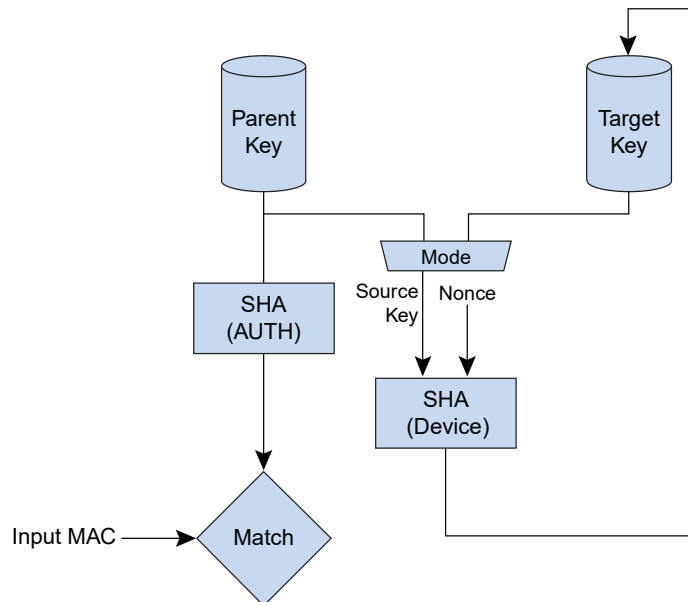

5.3.4 GenDig Command

The `GenDig` command uses a SHA-256 Hash to combine a stored or input value with the contents of `TempKey`, which must be validated prior to the execution of this command. The stored value can come from one of the data slots, the Configuration zone, either of the OTP pages, or the monotonic counters. The specific mode of the device determines which data is to be included in the `GenDig` calculation.

In some cases, it is required to run the `GenDig` prior to the execution of some commands. The command can be run multiple times to include more data in the digest prior to executing a given command. The resulting digest is retained in `TempKey` and can be used in one of four ways:

1. It can be included as part of the message used by the `MAC`, `Sign` or `CheckMac` commands. Because the `MAC` response output incorporates both the data used in the `GenDig` calculation and the secret key from the `MAC` command, it serves to authenticate the data stored in the Data and/or OTP zones.
2. A subsequent `Read` or `Write` command can use the digest to provide authentication and/or confidentiality for the data, in which case it is known as a data protection digest.
3. The command can be used for secure personalization by using a value from the transport keyarray. The resulting data protection digest would then be used by write.

- The input value, typically a nonce from a remote device, is combined with the current TempKey value to create a shared nonce in which both devices can attest to the inclusion of the RNG.

5.3.4.1 GenDig - Config

Data from the Configuration zone can be included in the GenDig calculation. Data are always included in 32-byte blocks and only one block may be included on any given GenDig calculation. The `Nonce` command must be run prior to the first `GenDig` command to load a value into TempKey. Subsequent `GenDig` commands will use the value stored in TempKey from the previous GenDig operation.

Table 5-67. Input Parameters GenDig Config

Opcode (1 Byte)	Mode (1 Byte)	KeyID ⁽¹⁾ (2 Bytes)	Data (0 Bytes)	Description
0x15	0x00	0x00 00	—	Use Configuration Block 0
		0x00 01	—	Use Configuration Block 1
		0x00 02	—	Use Configuration Block
		0x00 03	—	Use Configuration Block 3

Note:

- KeyId specifies the Configuration zone block to be used in the TempKey Calculation.

Table 5-68. Output Response - GenDig Config

Name	Size	Description
Response	1 byte	0x00 - If successful. Error code - If the command fails.

Notes: Flag Bits

- TempKey.Valid flag will be set to 1 if successful, otherwise it is 0.
- TempKey.GenDigData will be set to 0.

Table 5-69. TempKey Calculation - GenDig Config

32 bytes	Configuration Zone Block
1 byte	Opcode = 0x15
1 byte	Mode = 0x00
2 bytes	KeyID[0:1] = 0x0[block] 0x00
1 byte	SN[8] = Varies by vendor
2 bytes	SN[0:1] = 0x01 0x23
25 bytes	All Zeros
32 bytes	TempKey.Value

5.3.4.2 GenDig - OTP

Data from the OTP zone can be included in the GenDig calculation. Data are always included in 32-byte blocks and only one block may be included on any given GenDig calculation. The `Nonce` command must be run prior to the first `GenDig` command to load a value into TempKey. Subsequent `GenDig` commands will use the value from the previous GenDig operation.

Table 5-70. Input Parameters - GenDig OTP

Opcode (1 Byte)	Mode (1 Byte)	KeyID ⁽¹⁾ (2 Bytes)	Data (0 Bytes)	Description
0x15	0x01	0x00 00	—	Use OTP Block 0 as the KeyID
		0x00 01	—	Use OTP Block 1 as the KeyID

Note:

1. KeyId specifies the OTP zone block to be used in the TempKey calculation.

Table 5-71. Output Response - GenDig OTP

Name	Size	Description
Response	1 byte	0x00 - If successful. Error code - If the command fails.

Notes: Flag Bits

1. TempKey.Valid flag will be set to 1 if successful, otherwise it is 0.
2. TempKey.GenDigData will be set to 0.

Table 5-72. TempKey Calculation - GenDig OTP

32 bytes	OTP Zone Block
1 byte	Opcode = 0x15
1 byte	Mode = 0x00
2 bytes	KeyID[0:1] = 0x0[block] 0x00
1 byte	SN[8] = Varies by vendor
2 bytes	SN[0:1] = 0x01 0x23
25 bytes	All Zeros
32 bytes	TempKey.Value

5.3.4.3 GenDig - Data

Data from the Data zone slots can be included in the GenDig calculation. Data are always included in 32-byte blocks and only the lowest block of a slot is included in the GenDig calculation. The `Nonce` command must be run prior to the first `GenDig` command to load a value into TempKey. If the slot requires a random nonce, then the data must be generated by the `Nonce` command versus passing it into the device. Subsequent `GenDig` commands will use the value from the previous `GenDig` operation.

If a slot is set for NoMAC, then it is not allowed to use the output of this `GenDig` in a `MAC` command. If multiple `GenDigs` are run, if any slot has NoMAC set, then the output in TempKey cannot be used in executing a `MAC` command.

Table 5-73. Input Parameters - GenDig Data

Opcode (1 Byte)	Mode (1 Byte)	KeyID ⁽¹⁾ (2 Bytes)	Data (0 or 4 Bytes)	Description
0x15	0x02	0x00 0[Slot]	—	Use data from slot # in the calculation.
		0x00 0[Slot]	4 bytes	Use data from slot # in the calculation and other data when using a NoMAC key slot

Note:

1. KeyId specifies the Data zone slot to be used in the TempKey calculation. Only the lowest 32 bytes will be used.

Table 5-74. Output Response - GenDig Data

Name	Size	Description
Response	1 byte	0x00 - If successful. Error code - If the command fails.

Notes: Flag Bits

1. TempKey.Valid flag will be set to 1 if successful, otherwise it is 0.
2. TempKey.GenDigData will be set to 1 indicating a DataZone slot was used in the calculation.
3. TempKey.KeyID will set to the slot specified in the command.
4. TempKey.NoMacFlag will be set to 0 if the `MAC` command is allowed and 1 if it is not.

Table 5-75. TempKey Calculation - GenDig Data

Size	Parameters - MAC	Parameters - NoMAC
32 bytes	DATA.slot[KeyID]	DATA.slot[KeyID]
4 byte	Opcode, Mode, KeyID = 0x15, 0x02, 0x0[Slot] 0x00	OtherData[0:3]
1 byte	SN[8] = Varies by vendor	SN[8] = Varies by vendor
2 bytes	SN[0:1] = 0x01 0x23	SN[0:1] = 0x01 0x23
25 bytes	All Zeros	All Zeros
32 bytes	TempKey.Value	TempKey.Value

5.3.4.4 GenDig - Shared Nonce

In Shared Nonce mode 32 bytes of data are input to this command. This mode is used when a nonce value must be shared between two devices. The `Nonce` command must be run prior to the first `GenDig` command to load a value into `TempKey`. Subsequent `GenDig` commands will use the value from the previous `GenDig` operation.

Table 5-76. Input Parameters GenDig Shared Nonce

Opcode (1 Byte)	Mode (1 Byte)	KeyID ⁽¹⁾ (2 Bytes)	Data (32 Bytes)	Description
0x15	0x03	0x00 0[Slot]	Input data	
		0x80 0[Slot]	Input data	

Note:

1. KeyId specifies the DataZone slot to be used in the `TempKey` calculation. Only the lowest 32 bytes will be used.

Table 5-77. Output Response - GenDig Data

Name	Size	Description
Response	1 byte	0x00 - If successful. Error code - If the command fails.

Notes: Flag Bits

1. `TempKey.Valid` flag will be set to 1 if successful, otherwise it is 0.
2. `TempKey.GenDigData` will be set to 1 indicating a DataZone slot was used in the calculation.
3. `TempKey.KeyID` will set to the slot specified in the command.

Table 5-78. TempKey Calculation - GenDig Shared Nonce

Size	Parameters - KeyID MSB 0x00	Parameters - KeyID MSB 0x80
32 bytes	Input Data	TempKey.value
1 byte	Opcode = 0x15	Opcode = 0x15
1 byte	Mode = 0x03	Mode = 0x03
1 byte	LSB of KeyID = 0x0[Slot]	LSB of KeyID = 0x0[Slot]
1 byte	0x00	0x00
1 byte	SN[8] = Varies by vendor	SN[8] = Varies by vendor
2 bytes	SN[0:1] = 0x01 0x23	SN[0:1] = 0x01 0x23
25 bytes	All Zeros	All Zeros
32 bytes	TempKey.Value	Input Data

5.3.4.5 GenDig - Counter

In the Counter mode of the `GenDig` command, the binary value of the counter is included in the `TempKey` calculation. The `Nonce` command must be run prior to the first `GenDig` command to load a value into `TempKey`. Subsequent `GenDig` commands will use the value from the previous `GenDig` operation.

Table 5-79. Input Parameters - GenDig Counter

Opcode (1 Byte)	Mode (1 Byte)	KeyID (2 Bytes)	Data (0 Bytes)	Description
0x15	0x04	0x00 00	—	Include Counter[0] value
		0x00 01	—	Include Counter[1] value

Note:

1. `KeyId` specifies the monotonic counter value to be used in the `TempKey` calculation.

Table 5-80. Output Response - GenDig Counter

Name	Size	Description
Response	1 byte	0x00 - If successful. Error code - If the command fails.

Notes: Flag Bits

1. `TempKey.Valid` flag will be set to 1 if successful, otherwise it is 0.
2. `TempKey.GenDigData` will be set to 0.

Table 5-81. TempKey Calculation - GenDig Counter

32 bytes	All Zeros
1 byte	Opcode = 0x15
1 byte	Mode = 0x04
2 bytes	KeyID[0:1] = 0x0[Counter#] 0x00
1 byte	SN[8] = Varies by vendor
2 bytes	SN[0:1] = 0x01 0x23
1 byte	Zero
4 bytes	Counter[KEYID] - Binary value as reported by the <code>Counter</code> command
20 bytes	All Zeros
32 bytes	<code>TempKey.Value</code>

5.3.4.6 GenDig - Key Config

In the Key Config mode of the `GenDig` command, the slot configuration and key configuration of the key specified by `KeyID` are included in the `GenDig TempKey` calculation. The `Nonce` command must be run prior to the first `GenDig` command to load a value into `TempKey`. Subsequent `GenDig` commands will use the value from the previous `GenDig` operation.

Table 5-82. Input Parameters - GenDig Key Config

Opcode (1 Byte)	Mode (1 Byte)	KeyID ⁽¹⁾ (2 Bytes)	Data (0 or 4 Bytes)	Description
0x15	0x05	0x00 0[Slot]	—	Includes slot configuration information

Note:

1. `KeyId` specifies the slot # that will have its configuration information included in the `TempKey` calculation. The actual slot value is not included.

Table 5-83. Output Response - GenDig Key Config

Name	Size	Description
Response	1 byte	0x00 - If successful. Error code - If the command fails.

Notes: Flag Bits

1. TempKey.Valid flag will be set to 1 if successful, otherwise it is 0.
2. TempKey.GenDigData will be set to 0.

Table 5-84. TempKey Calculation - GenDig Key Config

32 bytes	TempKey.value
1 byte	Opcode = 0x15
1 byte	Mode = 0x05
2 bytes	KeyID[0:1] = 0x0[Slot] 0x00
1 byte	SN[8] = Varies by vendor
2 bytes	SN[0:1] = 0x01 0x23
1 byte	0x00
2 bytes	SlotConfig[KeyID]
2 bytes	KeyConfig[KeyID]
1 byte	SlotLocked[KeyID]
20 bytes	All Zeros

5.3.5 KDF Command

For the ATECC608B-TNGLoRaWAN, the **KDF** command implements the AES Key Derivation Function. Support for this function is available in CryptoAuthLib.

For additional information on the **KDF** command contact Microchip Sales for more information.

5.3.6 MAC Command

The Message Authentication Code (**MAC**) command is used to generate a SHA256 digest of a message, which consists of a key stored in the device, a challenge, and other information on the device. The output of this command is the digest of this message.

The normal command flow to use this command is as follows:

1. Run the **Nonce** command to load input challenge and optionally combine it with a generated random number. The result of this operation is a nonce stored internally on the device.
2. Optionally run the **GenDig** command one or more times to combine stored EEPROM locations in the device with the nonce. The result is stored internally in the device. This capability permits two or more keys to be used as part of the response generation.
3. Run this **MAC** command to combine the output of step 1 (and step 2 if desired) with an EEPROM key to generate an output response (i.e., digest).

Alternatively, data in any slot (which does not have to be secret) can be accumulated into the response through the same GenDig mechanism. This has the effect of authenticating the value stored in that location.

5.3.6.1 Non-Diversified MAC

The MAC is always calculated over a total of 88 bytes and always creates a 32-byte SHA256 digest. A non-diversified MAC does not include the serial number of the device and will therefore be the same across all devices if the input parameters are the same.

Table 5-85. Input Parameters - Non-Diversified MAC

Opcode (1 Byte)	Mode (1 Byte)	KeyID (2 Bytes)	Data ⁽²⁾ (0-32 Bytes)	Mode Descriptions
0x08	0x00	0x00 0[Slot]	32 bytes	<ul style="list-style-type: none"> First 32 bytes loaded from data slot Second 32 bytes are taken from the input challenge
	0x01 or 0x05 ⁽¹⁾	0x00 0[Slot]	0 bytes	<ul style="list-style-type: none"> First 32 bytes loaded from data slot Second 32 bytes are taken from TempKey
	0x02 or 0x06 ⁽¹⁾	0x00 00	32 bytes	<ul style="list-style-type: none"> First 32 bytes loaded with TempKey Second 32 bytes are taken from the input challenge

Note:

(1) Mode[2] must match the TempKey.SourceFlag.

(2) When present, the Data parameter corresponds to the input challenge.

Table 5-86. Output Response - Non-Diversified MAC

Name	Size	Description
Response	1 byte	If the command fails
	32 bytes	SHA-256 digest

Table 5-87. Non-Diversified MAC Calculation

# of Bytes	Mode 0x00	Mode 0x01 or 0x05	Mode 0x02 or 0x06
32	Data Slot	Data Slot	TempKey
32	Input Challenge	TempKey	Input Challenge
1	Opcode (0x08)	Opcode (0x08)	Opcode (0x08)
1	Mode	Mode	Mode
2	KeyID	KeyID	KeyID
11	Zeros	Zeros	Zeros
1	SN[8] Varies by vendor	SN[8] Varies by vendor	SN[8] Varies by vendor
4	Zeros	Zeros	Zeros
2	SN[0:1] 0x01 0x23	SN[0:1] 0x01 0x23	SN[0:1] 0x01 0x23
2	Zeros	Zeros	Zeros

5.3.6.2 Diversified MAC

A diversified MAC includes the serial number of the device. The serial number will be unique for each device and therefore, will always generate a unique SHA256 digest. The MAC is always calculated over a total of 88 bytes and always creates a 32-byte SHA256 digest.

Table 5-88. Input Parameters - Diversified MAC

Opcode (1 Byte)	Mode (1 Byte)	KeyID (2 Bytes)	Data ⁽²⁾ (0-32 Bytes)	Mode Descriptions
0x08	0x40	0x00 0[Slot]	32 bytes	<ul style="list-style-type: none"> First 32 bytes loaded from data slot Second 32 bytes are taken from the input challenge
	0x41 or 0x45 ⁽¹⁾	0x00 0[Slot]	0 bytes	<ul style="list-style-type: none"> First 32 bytes loaded from data slot Second 32 bytes are taken from TempKey
	0x42 or 0x46 ⁽¹⁾	0x00 00	32 bytes	<ul style="list-style-type: none"> First 32 bytes loaded with TempKey Second 32 bytes are taken from the input challenge

Note:

- (1) Mode[2] must match the TempKey.SourceFlag.
- (2) When present, the Data parameter corresponds to the input challenge.

Table 5-89. Output Response - Diversified MAC

Name	Size	Description
Response	1 byte	If the command fails
	32 bytes	SHA-256 digest

Table 5-90. Diversified MAC Calculation

# of Bytes	Mode 0x40	Mode 0x41 or 0x45	Mode 0x42 or 0x46
32	Data Slot	Data Slot	TempKey
32	Input Challenge	TempKey	Input Challenge
1	Opcode (0x08)	Opcode (0x08)	Opcode (0x08)
1	Mode	Mode	Mode
2	KeyID	KeyID	KeyID
11	Zeros	Zeros	Zeros
1	SN[8]Varies by vendor	SN[8] Varies by vendor	SN[8] Varies by vendor
4	SN[4:7]	SN[4:7]	SN[4:7]
2	SN[0:1] 0x01 0x23	SN[0:1] 0x01 0x23	SN[0:1] 0x01 0x23
2	SN[2:3]	SN[2:3]	SN[2:3]

6. Application Information

The ATECC608B-TNGLoRaWAN is a member of the Microchip's Trust&GO CryptoAuthentication family of products. The Trust&GO products are easy to use, simple to implement and allow even low volume customers to implement security into their end system while leveraging Microchip's expertise and infrastructure in secure provisioning.

The ATECC608B-TNGLoRaWAN device is compatible with the LoRaWAN 1.1 specification and backwards compatible with the LoRaWAN 1.0 specification. Primary enhancement to LoRaWAN 1.1 was associated with improving overall security. Support for LoRaWAN Backend Interfaces has been built into the device to offer support for roaming access across various LoRaWAN networks.

The ATECC608B-TNGLoRaWAN device has been developed to take the guesswork out of adding security to a LoRa Wide Area Network. The product has been preconfigured to readily connect IoT devices to major LoRa network service providers such as Actility and TTI. For any given application, a specific network infrastructure provider must be selected. Each infrastructure provider will have its own private key from which diversified parent keys for each device are generated. The diversified parent keys are then used to generate multiple network and application AES Session keys.

The ATECC608B-TNGLoRaWAN device is integrated with the Microchip's Secure Provisioning environment to quickly and easily add devices to major network security providers. This allows for rapid prototyping to verify new designs and rapid deployment of products once initial prototyping is complete.

7. I²C Interface

The I²C Interface uses the SDA and SCL pins to indicate various I/O states to the ATECC608B-TNGLoRaWAN. This interface is designed to be compatible at the protocol level with the Microchip AT24C16 Serial EEPROM operating at 1 MHz.

Note: There are many differences between the two devices (for example, the ATECC608B-TNGLoRaWAN and AT24C16 have different default I²C addresses); therefore, designers should read the respective data sheets carefully.

The SDA pin is normally pulled high with an external pull-up resistor because the ATECC608B-TNGLoRaWAN includes only an open-drain driver on its output pin. The bus master may either be open-drain or totem pole. In the latter case, it should be tri-stated when the ATECC608B-TNGLoRaWAN is driving results on the bus. The SCL pin is an input and must be driven both high and low at all times by an external device or resistor.

7.1 I/O Conditions

The device responds to the following I/O conditions:

7.1.1 Device is Asleep

When the device is asleep, it ignores all but the Wake condition.

- Wake - Upon the rising edge of SDA, after SDA has been held low for a period $\geq t_{WLO}$, the device exits the Low-Power mode. After a delay of t_{WHI} , it will be ready to receive I²C commands.
- The device ignores any levels or transitions on the SCL pin when the device is idle or asleep and during t_{WLO} . At some point during t_{WHI} , the SCL pin is enabled and the conditions listed in Section 7.1.2 [Device is Awake](#) are honored.

The Wake condition requires that either the system processor manually drives the SDA pin low for t_{WLO} , or a data byte of 0x00 be transmitted at a clock rate sufficiently slow so that SDA is low for a minimum period of t_{WLO} . When the device is awake, the normal processor I²C hardware and/or software can be used for device communications. This includes the I/O sequences required to put the device back into Low-Power (i.e., Sleep) mode.



Tip: A simple way to generate a wake pulse is to send a byte of 0x00 at 100 kHz. Subsequent commands can be run at a higher frequency.

In the I²C mode, the device will ignore a wake sequence that is sent when the device is already awake.

Multiple Devices on the Bus

When there are multiple devices on the bus and the I²C interface is run at speeds of less than ~ 300 kHz¹, the transmission of certain data patterns will cause the ATECC608B-TNGLoRaWAN devices on the bus to wake up. The lower the frequency the higher the probability that the device wakes up. Because subsequent device addresses transmitted along the bus only match the desired devices, the ATECC608B-TNGLoRaWAN will not respond but will be awake. It is recommended that after communicating with another device at slow frequencies, a sleep or idle sequence be issued to place the ATECC608B-TNGLoRaWAN back into a known state.



Important: t_{WLO} is the minimum time that the system must provide to ensure that the ATECC608B-TNGLoRaWAN will wake under all manufacturing and environmental conditions. In actuality, the device may wake up with a lesser pulse width.


¹ The actual frequency for a given device will vary with process and environmental factors. This value is considered safe under all conditions.

7.1.2 Device is Awake

When the device is awake, it honors the conditions listed below:


- **DATA Zero:** If SDA is low and stable while SCL goes from low to high to low, then a zero bit is being transferred on the bus. SDA can change while SCL is low.
- **DATA One:** If SDA is high and stable while SCL goes from low to high to low, then a one bit is being transferred on the bus. SDA can change while SCL is low.

Figure 7-1. Data Bit Transfer on I²C Interface

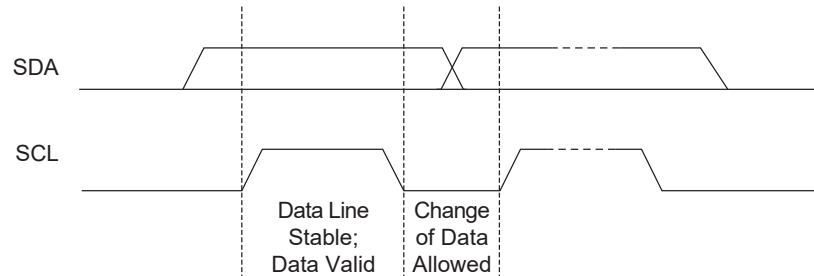


- **Start Condition:** A high-to-low transition of SDA with SCL high is a Start condition which must precede all commands.
- **Stop Condition:** A low-to-high transition of SDA with SCL high is a Stop condition. After this condition is received by the device, the current I/O transaction ends. On input, if the device has sufficient bytes to execute a command, the device transitions to the busy state and begins execution. The Stop condition should always be sent at the end of any packet sent to the device.

Figure 7-2. Start and Stop Conditions on I²C Interface

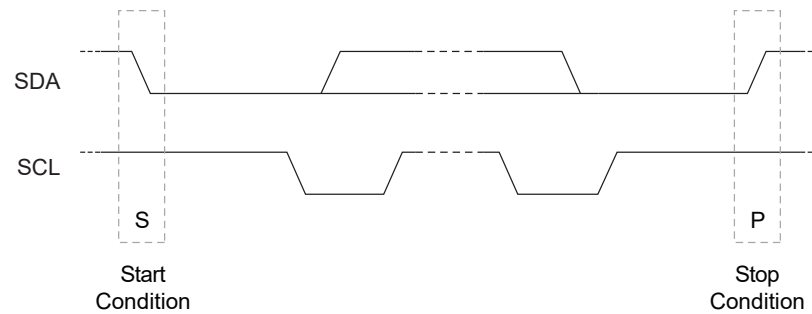

- **Acknowledge (ACK):** On the ninth clock cycle after every address or data byte is transferred, the receiver will pull the SDA pin low to acknowledge proper reception of the byte.
- **Not Acknowledge (NACK):** Alternatively, on the ninth clock cycle after every address or data byte is transferred, the receiver can leave the SDA pin high to indicate that there was a problem with the reception of the byte or that this byte completes the group transfer.

Figure 7-3. NACK and ACK Conditions on I²C Interface

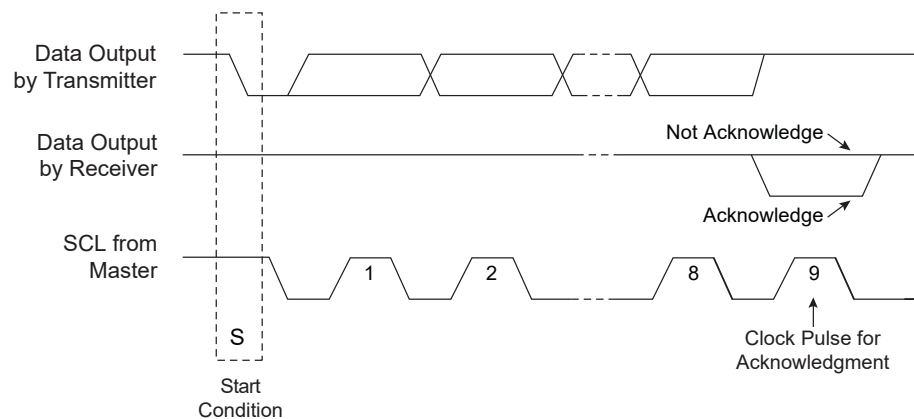


Multiple ATECC608B-TNGLoRaWAN devices can easily share the same I²C interface signals if the I2C_Address byte in the Configuration zone is programmed differently for each device on the bus. Because all seven of the bits of the device address are programmable, ATECC608B-TNGLoRaWAN can also share the I²C interface with any I²C device, including any Serial EEPROM.

7.2 I²C Transmission to ATECC608B-TNGLoRaWAN

The transmission of data from the system to the ATECC608B-TNGLoRaWAN is summarized in the table below. The order of transmission is as follows:

- Start Condition
- Device Address Byte
- Word Address Byte
- Optional Data Bytes (1 through N)
- Stop Condition

Figure 7-4. Normal I²C Transmission to ATECC608B-TNGLoRaWAN

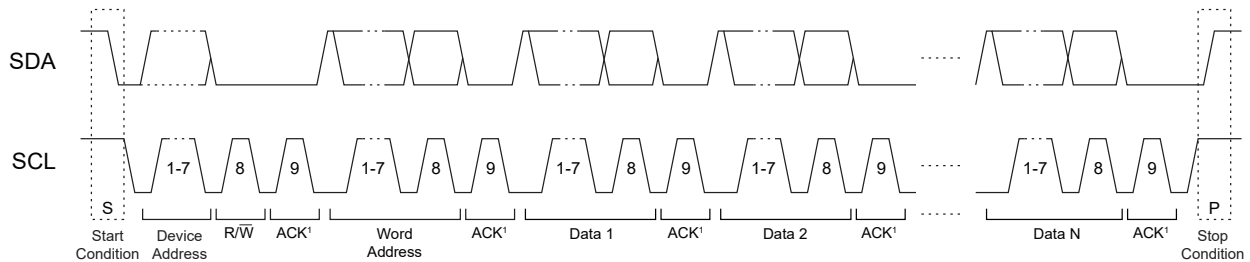

SDA is driven low by ATECC608B-TNGLoRaWAN ACK periods.

The following tables label the bytes of the I/O transaction. The column labeled “I²C Name” provides the name of the byte as described in the AT24C16 data sheet.

Table 7-1. I²C Transmission to ATECC608B-TNGLoRaWAN

Name	I ² C Name	Description
Device Address	Device Address	This byte selects a particular device on the I ² C interface. ATECC608B-TNGLoRaWAN is selected if bits 1 through 7 of this byte match bits 1 through 7 of the I2C_Address byte in the Configuration zone. Bit 0 of this byte is the standard I ² C R/W bit, and should be zero to indicate a write operation (the bytes following the device address travel from the master to the slave).
Word Address	Word Address	This byte should have a value of 0x03 for normal operation. See Section 7.2.1 Word Address Values for more information.
Command	Data1,N	The command group, consisting of the count, command packet, and the two-byte CRC. The CRC is calculated over the size and packet bytes. See Section 4.1 I/O Transactions .

Because the device treats the command input buffer as a FIFO, the input group can be sent to the device in one or many I²C command groups. The first byte sent to the device is the count, so after the device receives that number of bytes, it will ignore any subsequently received bytes until execution is finished.

The system must send a Stop condition after the last command byte to ensure that ATECC608B-TNGLoRaWAN will start the computation of the command. Failure to send a Stop condition may eventually result in a loss of synchronization; see Section 7.2.2 [I2C Synchronization](#) for recovery procedures.

7.2.1 Word Address Values

During an I²C write packet, the ATECC608B-TNGLoRaWAN interprets the second byte sent as the word address, which indicates the packet function as it is described in the table below:

Table 7-2. Word Address Values

Name	Value	Description
Reset	0x00	Reset the address counter. The next I ² C read or write transaction will start with the beginning of the I/O buffer.
Sleep (Low-power)	0x01	The ATECC608B-TNGLoRaWAN goes into the low-power Sleep mode and ignores all subsequent I/O transitions until the next Wake flag. The entire volatile state of the device is reset.
Idle	0x02	The ATECC608B-TNGLoRaWAN goes into the Idle mode and ignores all subsequent I/O transitions until the next Wake flag. The contents of TempKey, MessageDigestBuffer, and Alternate Key registers are retained.
Command	0x03	Write subsequent bytes to sequential addresses in the input command buffer that follow previous writes. This is the normal operation.
Reserved	0x04 – 0xFF	These addresses should not be sent to the device.

7.2.2 I²C Synchronization

It is possible for the system to lose synchronization with the I/O port on the ATECC608B-TNGLoRaWAN, perhaps due to a system Reset, I/O noise, or other conditions. Under this circumstance, the ATECC608B-TNGLoRaWAN may not respond as expected, may be asleep, or may be transmitting data during an interval when the system is expecting to send data. To resynchronize, the following procedure can be followed:

1. To ensure an I/O channel Reset, the system must send the standard I²C software Reset sequence, as follows:
 - A Start bit condition
 - Nine cycles of SCL, with SDA held high by the system pull-up resistor
 - Another Start bit condition
 - A Stop bit condition

It should then be possible to send a read sequence, and if synchronization completes properly, the ATECC608B-TNGLoRaWAN will ACK the device address. The device may return data or may leave the bus floating (which the system will interpret as a data value of 0xFF) during the data periods.

If the device does ACK the device address, the system should reset the internal address counter to force the ATECC608B-TNGLoRaWAN to ignore any partial input command that may have been sent. This can be accomplished by sending a write sequence to word address 0x00 (Reset), followed by a Stop condition.

2. If the device does not respond to the device address with an ACK, then it may be asleep. In this case, the system must send a complete Wake token and wait t_{WHI} after the rising edge. The system may then send another read sequence, and if synchronization is complete, the device will ACK the device address.
3. If the device still does not respond to the device address with an ACK, then it may be busy executing a command. The system must wait the longest t_{EXEC} (max) and then send the read sequence, which will be acknowledged by the device.

7.3 Sleep Sequence

Upon completion of the use of the ATECC608B-TNGLoRaWAN by the system, the system should issue a sleep sequence to put the device into Low-Power mode. This sequence consists of the proper device address followed by the value of 0x01 as the word address followed by a Stop condition. This transition to the Low-Power state causes a complete reset of the device's internal command engine and input/output buffer. It can be sent to the device at any time when it is awake and not busy.

7.4 Idle Sequence

If the total sequence of required commands exceeds $t_{WATCHDOG}$, then the device will automatically go to sleep and lose any information stored in the volatile registers. This action can be prevented by putting the device into Idle mode prior to completion of the watchdog interval. When the device receives the Wake token, it will then restart the Watchdog Timer and execution can be continued.

The idle sequence consists of the proper device address followed by the value of 0x02 as the word address followed by a Stop condition. It can be sent to the device at any time when it is awake and not busy.

7.5 I²C Transmission from the ATECC608B-TNGLoRaWAN

When the ATECC608B-TNGLoRaWAN is awake and not busy, the bus master can retrieve the current output buffer contents from the device using an I²C read. If valid command results are available, the size of the group returned is determined by the particular command which has been run. Otherwise, the size of the group (and the first byte returned) will always be four: count, status/error, and 2-byte CRC. The bus timing is shown in [Figure 8-2](#).

Table 7-3. I²C Transmission from the ATECC608B-TNGLoRaWAN

Name	I ² C Name	Direction	Description
Device Address	Device Address	To slave	This byte selects a particular device on the I ² C interface and ATECC608B-TNGLoRaWAN will be selected if bits 1 through 7 of this byte match bits 1 through 7 of the I2C_Address byte in the Configuration zone. Bit 0 of this byte is the standard I ² C R/W pin, and should be one to indicate that the bytes following the device address travel from the slave to the master (read).
Data	Data1,N	To master	The output group, consisting of the count, status/error byte or the output packet followed by the two-byte CRC. See Section 4.1 I/O Transactions .

The status, error, or command outputs can be read repeatedly by the master. Each time a Read command is sent to the ATECC608B-TNGLoRaWAN along the I²C interface, the device transmits the next sequential byte in the output buffer. See the following section for details on how the device handles the address counter.

If the ATECC608B-TNGLoRaWAN is busy, idle, or asleep, it will NACK the device address on a read sequence. If a partial command has been sent to the device and a read sequence `[Start + DeviceAddress(R/W == R)]` is sent to the device, then the ATECC608B-TNGLoRaWAN will NACK the device address to indicate that no data is available to be read.

8. Electrical Characteristics

8.1 Absolute Maximum Ratings

Operating Temperature	-40°C to +85°C
Storage Temperature	-65°C to +150°C
Maximum Operating Voltage	6.0V
DC Output Current	5.0 mA
Voltage on any pin -0.5V to (V_{CC} + 0.5V)	-0.5V to (V _{CC} + 0.5V)
ESD Ratings:	
Human Body Model(HBM) ESD	>4kV
Charge Device Model(CDM) ESD	>1kV

Note: Stresses beyond those listed under “Absolute Maximum Ratings” may cause permanent damage to the device. This is a stress rating only and functional operation of the device at these or any other conditions beyond those indicated in the operational sections of this specification are not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

8.2 Reliability

The ATECC608B-TNGLoRaWAN is fabricated with Microchip’s high reliability CMOS EEPROM manufacturing technology.

Table 8-1. EEPROM Reliability

Parameter	Min.	Typ.	Max.	Units
Write Endurance at +85°C (Each Byte)	400,000	—	—	Write Cycles
Data Retention at +55°C	10	—	—	Years
Data Retention at +35°C	30	50	—	Years
Read Endurance	Unlimited			Read Cycles

8.3 AC Parameters: All I/O Interfaces

Figure 8-1. AC Timing Diagram: All Interfaces

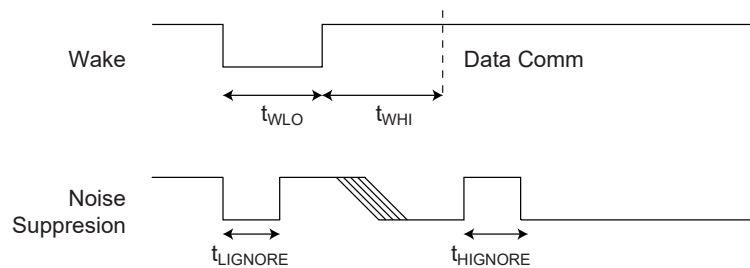


Table 8-2. AC Parameters: All I/O Interfaces

Parameter	Sym.	Direction	Min.	Typ.	Max.	Units	Conditions
Power-Up Delay ⁽²⁾	t _{PU}	To Crypto Device	100	—	—	μs	Minimum time between V _{CC} > V _{CC} min prior to start of t _{WLO} .
Wake Low Duration	t _{WLO}	To Crypto Device	60	—	—	μs	
Wake High Delay to Data Comm	t _{WHI}	To Crypto Device	1500	—	—	μs	SDA should be stable high for this entire duration unless polling is implemented. SelfTest is not enabled at power-up.
Wake High Delay when SelfTest is Enabled	t _{WHIST}	To Crypto Device	20	—	—	ms	SDA should be stable high for this entire duration unless polling is implemented.
High-Side Glitch Filter at Active	t _{HIGNORE_A}	To Crypto Device	45 ⁽¹⁾	—	—	ns	Pulses shorter than this in width will be ignored by the device, regardless of its state when active.
Low-Side Glitch Filter at Active	t _{LIGNORE_A}	To Crypto Device	45 ⁽¹⁾	—	—	ns	Pulses shorter than this in width will be ignored by the device, regardless of its state when active.
Low-Side Glitch Filter at Sleep	t _{LIGNORE_S}	To Crypto Device	15 ⁽¹⁾	—	—	μs	Pulses shorter than this in width will be ignored by the device when in Sleep mode.
Watchdog Time-out	t _{WATCHDOG}	To Crypto Device	0.7	1.3	1.7	s	Time from wake until device is forced into Sleep mode if Config.ChipMode[2] is 0.

Notes:

1. These parameters are characterized, but not production tested.
2. The power-up delay will be significantly longer if power-on self test is enabled in the Configuration zone.

8.3.1 AC Parameters: I²C Interface

Figure 8-2. I²C Synchronous Data Timing

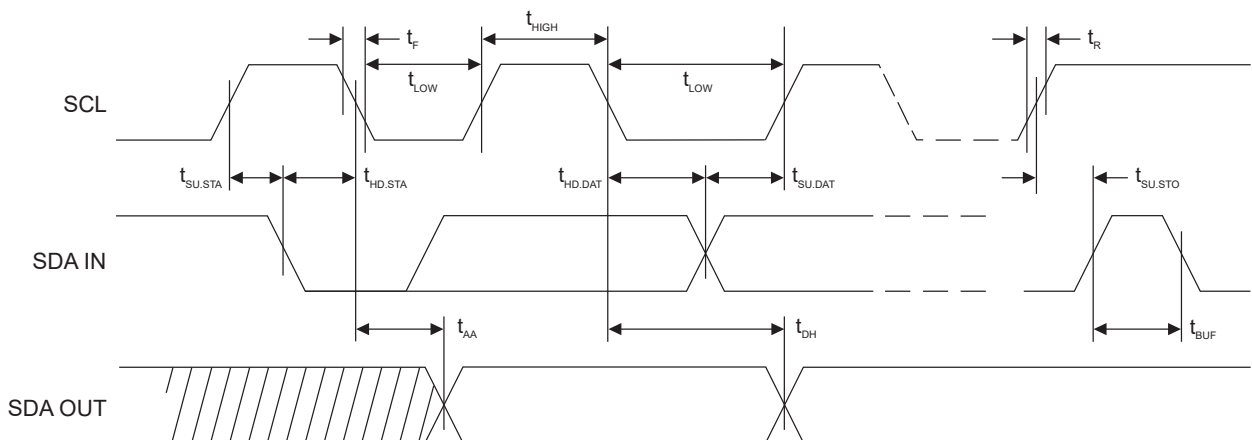


Table 8-3. AC Characteristics of I²C Interface⁽²⁾

Unless otherwise specified, applicable over recommended operating range from T_A = -40°C to +85°C, V_{CC} = +2.0V to +5.5V, C_L = 1 TTL Gate and 100 pF.

ATECC608B-LoRaWAN

Electrical Characteristics

Parameter	Sym.	Min.	Max.	Units
SCL Clock Frequency	f _{SCL}	0	1	MHz
SCL High Time	t _{HIGH}	400	—	ns
SCL Low Time	t _{LOW}	400	—	ns
Start Setup Time	t _{SU.STA}	250	—	ns
Start Hold Time	t _{HD.STA}	250	—	ns
Stop Setup Time	t _{SU.STO}	250	—	ns
Data In Setup Time	t _{SU.DAT}	100	—	ns
Data In Hold Time	t _{HD.DAT}	0	—	ns
Input Rise Time ¹	t _R	—	300	ns
Input Fall Time ¹	t _F	—	100	ns
Clock Low to Data Out Valid	t _{AA}	50	550	ns
Data Out Hold Time	t _{DH}	50	—	ns
SMBus Time-Out Delay	t _{TIMEOUT}	25	75	ms
Time bus must be free before a new transmission can start ¹	t _{BUF}	500	—	ns

Notes:

- Values are based on characterization and are not tested.
- AC measurement conditions:
 - R_L (connects between SDA and V_{CC}): 1.2 kΩ (for V_{CC} = +2.0V to +5.0V)
 - Input pulse voltages: 0.3V_{CC} to 0.7V_{CC}
 - Input rise and fall times: ≤ 50 ns
 - Input and output timing reference voltage: 0.5V_{CC}

8.4 DC Parameters: All I/O Interfaces

Table 8-4. DC Parameters on All I/O Interfaces

Parameter	Sym.	Min.	Typ.	Max.	Units	Conditions
Ambient Operating Temperature	T _A	-40	—	+85	°C	Standard Industrial Temperature Range
Power Supply Voltage	V _{CC}	2.0	—	5.5	V	—
Active Power Supply Current	I _{CC}	—	2	3	mA	Waiting for I/O during I/O transfers or execution of non-ECC commands. Independent of Clock Divider value.
		—	—	14	mA	During ECC command execution. Clock divider = 0x0
Idle Power Supply Current	I _{IDLE}	—	800	—	μA	When device is in Idle mode, V _{SDA} and V _{SCL} < 0.4V or > V _{CC} - 0.4
Sleep Current	I _{SLEEP}	—	30	150	nA	When device is in Sleep mode, V _{CC} ≤ 3.6V, V _{SDA} and V _{SCL} < 0.4V or > V _{CC} - 0.4, T _A ≤ +55°C
		—	—	2	μA	When device is in Sleep mode. Over full V _{CC} and temperature range.

ATECC608B-LoRaWAN

Electrical Characteristics

.....continued

Parameter	Sym.	Min.	Typ.	Max.	Units	Conditions
Output Low Voltage	V _{OL}	—	—	0.4	V	When device is in Active mode, V _{CC} = 2.5 to 5.5V
Output Low Current	I _{OL}	—	—	4	mA	When device is in Active mode, V _{CC} = 2.5 to 5.5V, V _{OL} = 0.4V
Theta JA	θ _{JA}	—	166	—	°C/W	SOIC (SSH)
		—	173	—	°C/W	UDFN (MAH)

8.4.1 V_{IH} and V_{IL} Specifications


The input levels of the device will vary dependent on the mode and voltage of the device. The input voltage thresholds when in Sleep or Idle mode are dependent on the V_{CC} level as shown in [Figure 8-3](#). When in Sleep or Idle mode the TTEnable bit has no effect.

The active input levels of the ATECC608B-TNGLoRaWAN are fixed and do not vary with the V_{CC} level. The input levels transmitted to the device must comply with the table below.

Table 8-5. V_{IL}, V_{IH} on All I/O Interfaces (TTEnable = 0)

Parameter	Sym.	Min.	Typ.	Max.	Units	Conditions
Input Low Voltage	V _{IL}	-0.5	—	0.5	V	When device is active and TTEnable bit in Configuration memory is zero; otherwise, see above.
Input High Voltage	V _{IH}	1.5	—	V _{CC} + 0.5	V	When device is active and TTEnable bit in Configuration memory is zero; otherwise, see above.

Figure 8-3. V_{IH} and V_{IL} in Sleep and Idle Mode

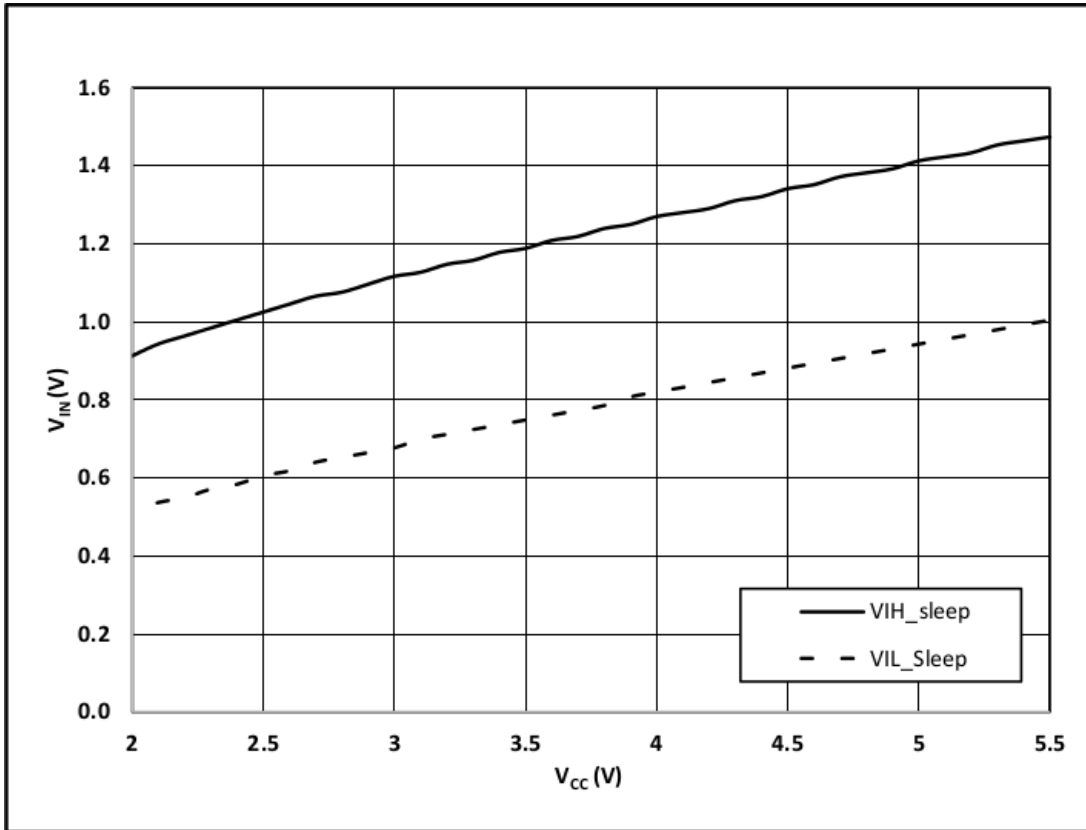

9. Package Drawings


9.1 Package Marking Information

As part of Microchip's overall security features, the part marking for all crypto devices is intentionally vague. The marking on the top of the package does not provide any information as to the actual device type or the manufacturer of the device. The alphanumeric code on the package provides manufacturing information and will vary with assembly lot. The packaging mark should not be used as part of any incoming inspection procedure.

9.2 8-pad UDFN

**8-Lead Ultra Thin Plastic Dual Flat, No Lead Package (Q4B) - 2x3 mm Body [UDFN]
 Atmel Legacy Global Package Code YNZ**

Note: For the most current package drawings, please see the Microchip Packaging Specification located at <http://www.microchip.com/packaging>

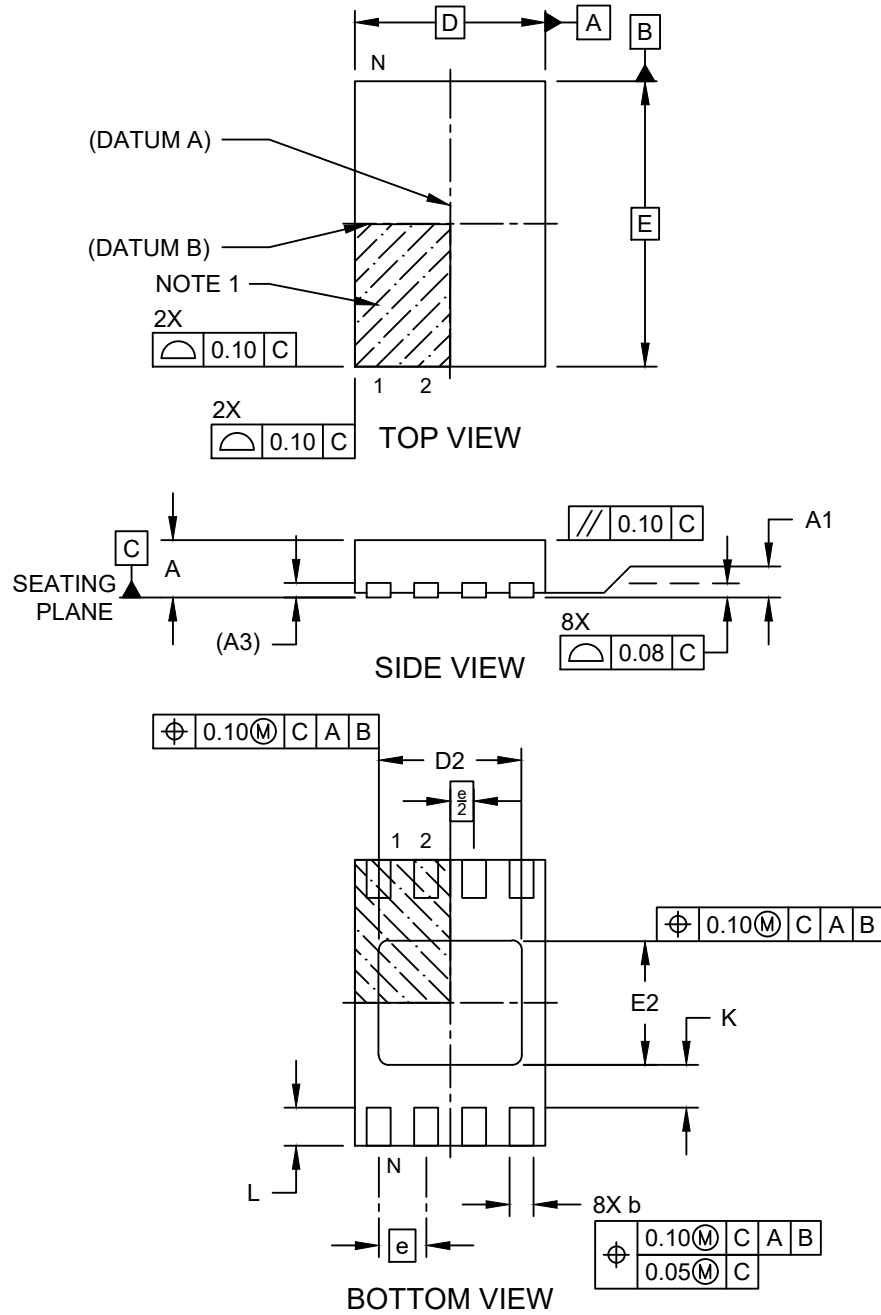


Microchip Technology Drawing C04-21355-Q4B Rev B Sheet 1 of 2

ATECC608B-LoRaWAN

Package Drawings

8-Lead Ultra Thin Plastic Dual Flat, No Lead Package (Q4B) - 2x3 mm Body [UDFN] Atmel Legacy Global Package Code YNZ

Note: For the most current package drawings, please see the Microchip Packaging Specification located at <http://www.microchip.com/packaging>

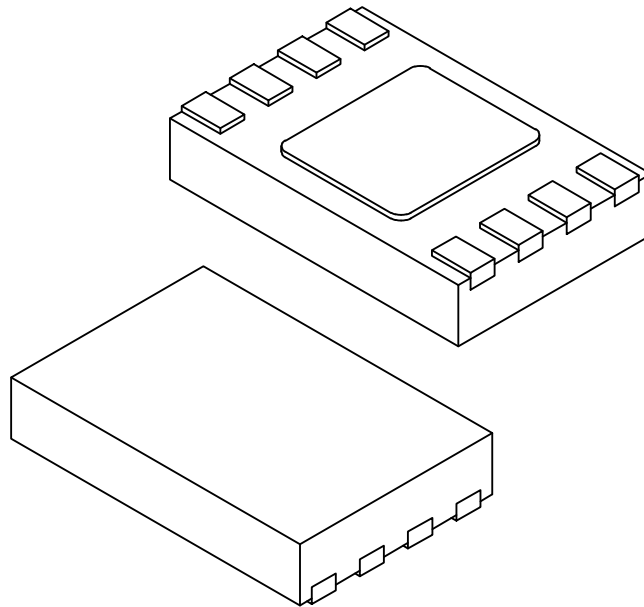

Dimension Limits	Units	MILLIMETERS		
		MIN	NOM	MAX
Number of Terminals	N	8		
Pitch	e	0.50 BSC		
Overall Height	A	0.50	0.55	0.60
Standoff	A1	0.00	0.02	0.05
Terminal Thickness	A3	0.152 REF		
Overall Length	D	2.00 BSC		
Exposed Pad Length	D2	1.40	1.50	1.60
Overall Width	E	3.00 BSC		
Exposed Pad Width	E2	1.20	1.30	1.40
Terminal Width	b	0.18	0.25	0.30
Terminal Length	L	0.35	0.40	0.45
Terminal-to-Exposed-Pad	K	0.20	-	-

Notes:

1. Pin 1 visual index feature may vary, but must be located within the hatched area.
2. Package is saw singulated
3. Dimensioning and tolerancing per ASME Y14.5M


BSC: Basic Dimension. Theoretically exact value shown without tolerances.

REF: Reference Dimension, usually without tolerance, for information purposes only.

Microchip Technology Drawing C04-21355-Q4B Rev B Sheet 2 of 2

8-Lead Ultra Thin Plastic Dual Flat, No Lead Package (Q4B) - 2x3 mm Body [UDFN] Atmel Legacy Global Package Code YNZ

Note: For the most current package drawings, please see the Microchip Packaging Specification located at <http://www.microchip.com/packaging>

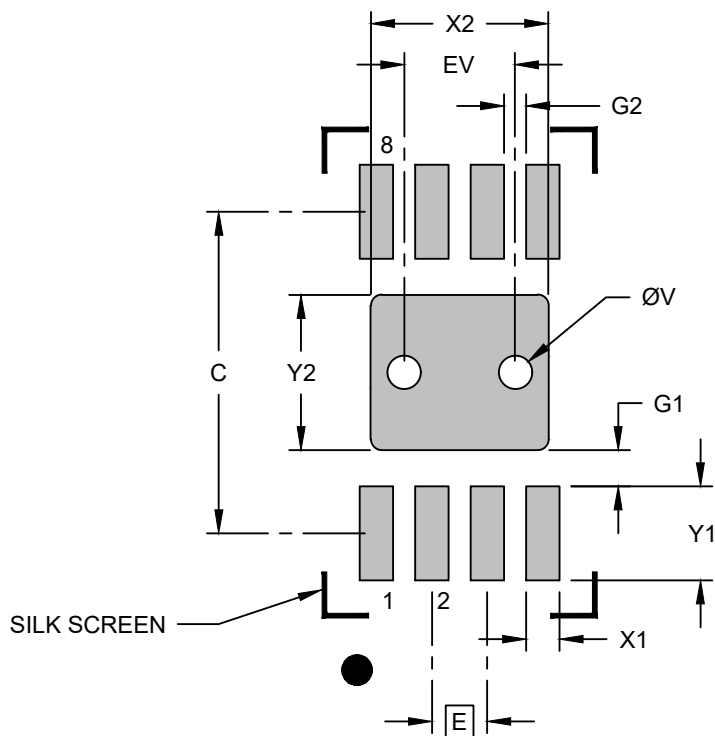

RECOMMENDED LAND PATTERN

Dimension Limits	Units	MILLIMETERS		
		MIN	NOM	MAX
Contact Pitch	E	0.50 BSC		
Optional Center Pad Width	X2			1.60
Optional Center Pad Length	Y2			1.40
Contact Pad Spacing	C		2.90	
Contact Pad Width (X8)	X1			0.30
Contact Pad Length (X8)	Y1			0.85
Contact Pad to Center Pad (X8)	G1	0.33		
Contact Pad to Contact Pad (X6)	G2	0.20		
Thermal Via Diameter	V		0.30	
Thermal Via Pitch	EV		1.00	

Notes:


- Dimensioning and tolerancing per ASME Y14.5M
BSC: Basic Dimension. Theoretically exact value shown without tolerances.
- For best soldering results, thermal vias, if used, should be filled or tented to avoid solder loss during reflow process

Microchip Technology Drawing C04-23355-Q4B Rev B

9.3 8-lead SOIC

**8-Lead Plastic Small Outline - Narrow, 3.90 mm (.150 In.) Body [SOIC]
 Atmel Legacy Global Package Code SWB**


Note: For the most current package drawings, please see the Microchip Packaging Specification located at <http://www.microchip.com/packaging>

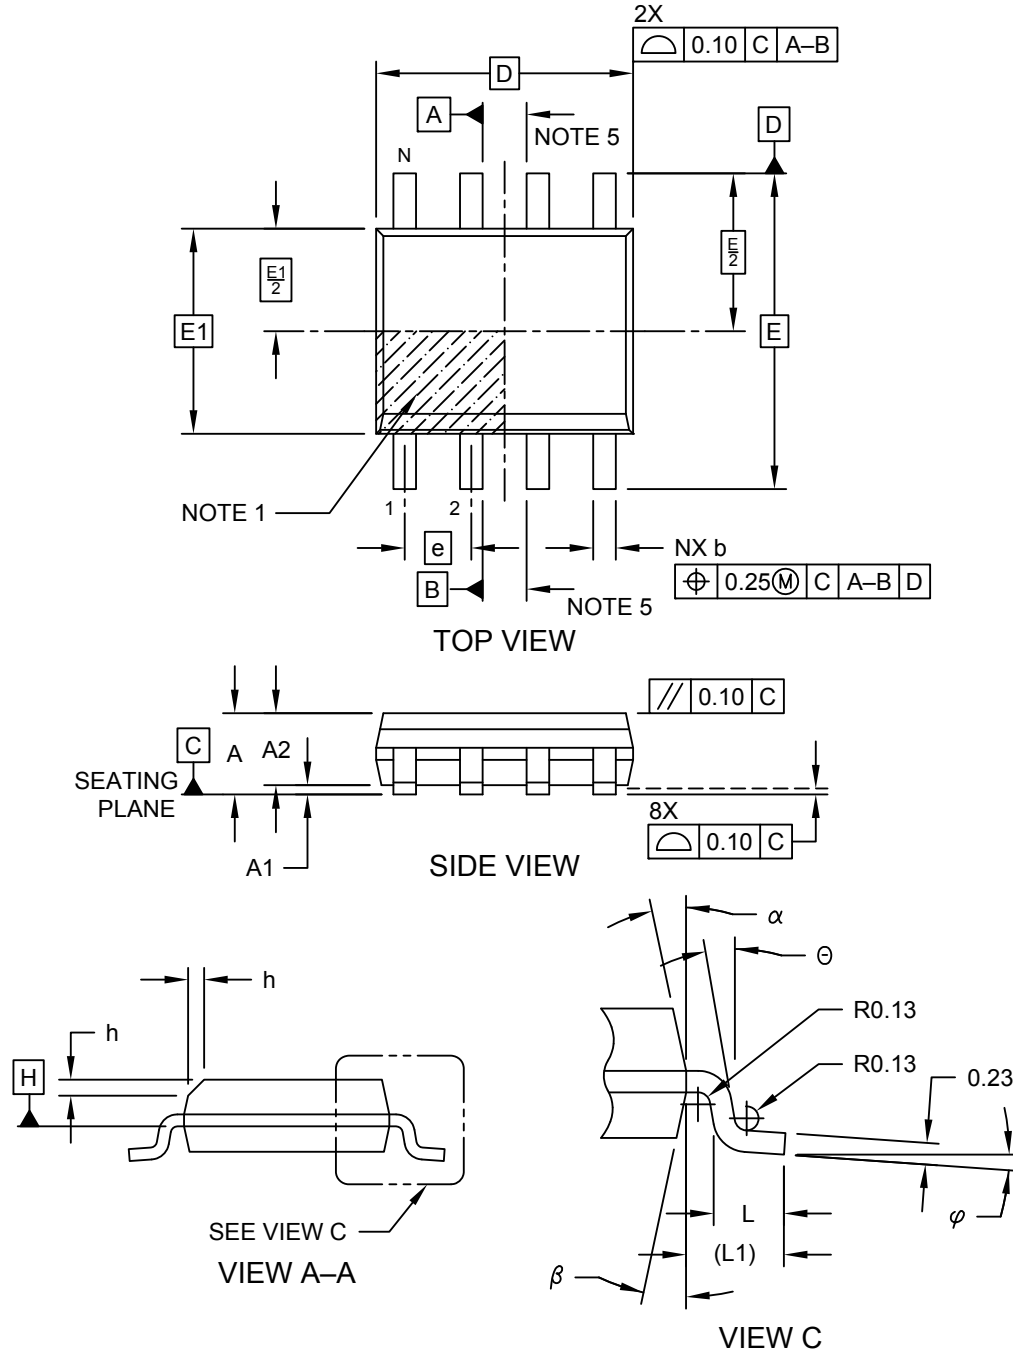

Microchip Technology Drawing No. C04-057-SWB Rev E Sheet 1 of 2

**8-Lead Plastic Small Outline - Narrow, 3.90 mm (.150 In.) Body [SOIC]
Atmel Legacy Global Package Code SWB**

Note: For the most current package drawings, please see the Microchip Packaging Specification located at <http://www.microchip.com/packaging>

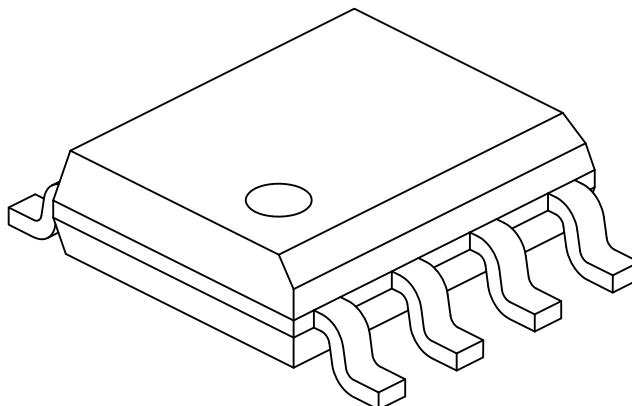

Dimension Limits	Units	MILLIMETERS		
		MIN	NOM	MAX
Number of Pins	N	8		
Pitch	e	1.27 BSC		
Overall Height	A	-	-	1.75
Molded Package Thickness	A2	1.25	-	-
Standoff §	A1	0.10	-	0.25
Overall Width	E	6.00 BSC		
Molded Package Width	E1	3.90 BSC		
Overall Length	D	4.90 BSC		
Chamfer (Optional)	h	0.25	-	0.50
Foot Length	L	0.40	-	1.27
Footprint	L1	1.04 REF		
Foot Angle	φ	0°	-	8°
Lead Thickness	c	0.17	-	0.25
Lead Width	b	0.31	-	0.51
Mold Draft Angle Top	α	5°	-	15°
Mold Draft Angle Bottom	β	5°	-	15°


Notes:

- Pin 1 visual index feature may vary, but must be located within the hatched area.
- § Significant Characteristic
- Dimensions D and E1 do not include mold flash or protrusions. Mold flash or protrusions shall not exceed 0.15mm per side.
- Dimensioning and tolerancing per ASME Y14.5M
 - BSC: Basic Dimension. Theoretically exact value shown without tolerances.
 - REF: Reference Dimension, usually without tolerance, for information purposes only.
- Datums A & B to be determined at Datum H.

Microchip Technology Drawing No. C04-057-SWB Rev E Sheet 2 of 2

**8-Lead Plastic Small Outline - Narrow, 3.90 mm (.150 In.) Body [SOIC]
Atmel Legacy Global Package Code SWB**

Note: For the most current package drawings, please see the Microchip Packaging Specification located at <http://www.microchip.com/packaging>

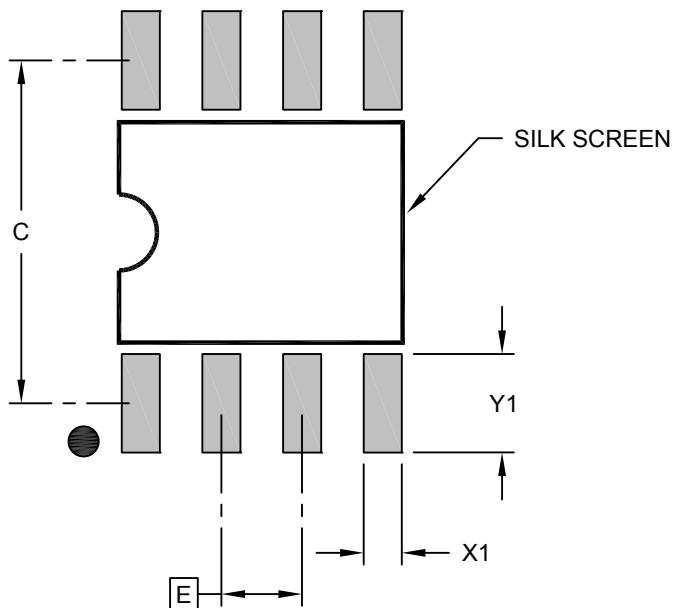
RECOMMENDED LAND PATTERN

Dimension Limits	Units	MILLIMETERS		
		MIN	NOM	MAX
Contact Pitch	E	1.27 BSC		
Contact Pad Spacing	C		5.40	
Contact Pad Width (X8)	X1			0.60
Contact Pad Length (X8)	Y1			1.55

Notes:

1. Dimensioning and tolerancing per ASME Y14.5M

BSC: Basic Dimension. Theoretically exact value shown without tolerances.

Microchip Technology Drawing C04-2057-SWB Rev E

10. Compatibility

ATECC608A-TNGLoRaWAN Compatibility

The ATECC608B-TNGLoRaWAN provides form, fit and function compatibility to the ATECC608A-TNGLoRaWAN device. Device configuration zone and slot configuration values are identical, operating conditions are identical, all commands and command modes are still supported and the 8-Pad UDFN and 8-PIN SOIC packages and pinouts are identical.

If a design was implemented using the Microchip Trust Platform Design Suite, then migration from the ATECC608A-TNGLoRaWAN to the ATECC608B-TNGLoRaWAN is seamless.

11. Revision History

Revision A (September 2020)

Original release of the document. Based on ATECC608A-TNGLoRaWAN (DS40002154B)

The Microchip Website

Microchip provides online support via our website at www.microchip.com/. This website is used to make files and information easily available to customers. Some of the content available includes:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip design partner program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

Product Change Notification Service

Microchip's product change notification service helps keep customers current on Microchip products. Subscribers will receive email notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, go to www.microchip.com/pcn and follow the registration instructions.

Customer Support

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Embedded Solutions Engineer (ESE)
- Technical Support

Customers should contact their distributor, representative or ESE for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in this document.

Technical support is available through the website at: www.microchip.com/support

Product Identification System

To order or obtain information, e.g., on pricing or delivery, refer to the factory or the listed sales office.

PART NO. X -X
 Device Package Type Tape and Reel

Device:	TTI Base Part #: ATECC608B-TNGLORA Actility Base Part #: ATECC608B-TNGACT Pre-configured Cryptographic Co-processor with secure hardware-based key storage for LoRa® Wide Area Networks	
Package Options	U	8-Pad 2 mm x 3 mm x 0.6 mm Body, Thermally Enhanced Plastic Ultra Thin Dual Flat, No Lead Package (UDFN)
	S	8-Lead (0.150" Wide Body), Plastic Gull Wing Small Outline (JEDEC® SOIC)
Tape and Reel Options	G	2k Reel
	C	100 Unit Reel
	B	10 Unit Bulk-Prototype units

Table 15-1. Device Ordering codes arranged by LoRa Network Provider

The Things Industry (TTI) Device Ordering Codes

- ATECC608B-TNGLORAU-G: Trust&GO LoRaWAN, Provisioned, 8-UDFN, I²C, 2K Reel
- ATECC608B-TNGLORAU-C: Trust&GO LoRaWAN, Provisioned, 8-UDFN, I²C, 100 Unit Reel
- ATECC608B-TNGLORAU-B: Trust&GO LoRaWAN, Prototyping, 8-UDFN, I²C, 10 Unit Bulk
- ATECC608B-TNGLORAS-G: Trust&GO LoRaWAN, Provisioned, 8-SOIC, I²C, 2K Reel
- ATECC608B-TNGLORAS-C: Trust&GO LoRaWAN, Provisioned, 8-SOIC, I²C, 100 Unit Reel
- ATECC608B-TNGLORAS-B: Trust&GO LoRaWAN, Prototyping, 8-SOIC, I²C, 10 Unit Bulk

Actility Device Ordering Codes

- ATECC608B-TNGACTU-G: Trust&GO LoRaWAN, Provisioned, 8-UDFN, I²C, 2K Reel
- ATECC608B-TNGACTU-C: Trust&GO LoRaWAN, Provisioned, 8-UDFN, I²C, 100 Unit Reel
- ATECC608B-TNGACTU-B: Trust&GO LoRaWAN, Prototyping, 8-UDFN, I²C, 10 Unit Bulk
- ATECC608B-TNGACTS-G: Trust&GO LoRaWAN, Provisioned, 8-SOIC, I²C, 2K Reel
- ATECC608B-TNGACTS-C: Trust&GO LoRaWAN, Provisioned, 8-SOIC, I²C, 100 Unit Reel
- ATECC608B-TNGACTS-B: Trust&GO LoRaWAN, Prototyping, 8-SOIC, I²C, 10 Unit Bulk

Note:

1. Tape and Reel identifier only appears in the catalog part number description. This identifier is used for ordering purposes and is not printed on the device package. Check with your Microchip Sales Office for package availability with the Tape and Reel option.

Microchip Devices Code Protection Feature

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specifications contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is secure when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods being used in attempts to breach the code protection features of the Microchip devices. We believe that these methods require using the Microchip products in a manner

outside the operating specifications contained in Microchip's Data Sheets. Attempts to breach these code protection features, most likely, cannot be accomplished without violating Microchip's intellectual property rights.

- Microchip is willing to work with any customer who is concerned about the integrity of its code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of its code. Code protection does not mean that we are guaranteeing the product is "unbreakable." Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Legal Notice

Information contained in this publication is provided for the sole purpose of designing with and using Microchip products. Information regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications.

THIS INFORMATION IS PROVIDED BY MICROCHIP "AS IS". MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE OR WARRANTIES RELATED TO ITS CONDITION, QUALITY, OR PERFORMANCE.

IN NO EVENT WILL MICROCHIP BE LIABLE FOR ANY INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL OR CONSEQUENTIAL LOSS, DAMAGE, COST OR EXPENSE OF ANY KIND WHATSOEVER RELATED TO THE INFORMATION OR ITS USE, HOWEVER CAUSED, EVEN IF MICROCHIP HAS BEEN ADVISED OF THE POSSIBILITY OR THE DAMAGES ARE FORESEEABLE. TO THE FULLEST EXTENT ALLOWED BY LAW, MICROCHIP'S TOTAL LIABILITY ON ALL CLAIMS IN ANY WAY RELATED TO THE INFORMATION OR ITS USE WILL NOT EXCEED THE AMOUNT OF FEES, IF ANY, THAT YOU HAVE PAID DIRECTLY TO MICROCHIP FOR THE INFORMATION. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

Trademarks

The Microchip name and logo, the Microchip logo, Adaptec, AnyRate, AVR, AVR logo, AVR Freaks, BesTime, BitCloud, chipKIT, chipKIT logo, CryptoMemory, CryptoRF, dsPIC, FlashFlex, flexPWR, HELDO, IGLOO, JukeBlox, KeeLoq, Klear, LANCheck, LinkMD, maXStylus, maXTouch, MediaLB, megaAVR, Microsemi, Microsemi logo, MOST, MOST logo, MPLAB, OptoLyzer, PackeTime, PIC, picoPower, PICSTART, PIC32 logo, PolarFire, Prochip Designer, QTouch, SAM-BA, SenGenuity, SpyNIC, SST, SST Logo, SuperFlash, Symmetricom, SyncServer, Tachyon, TempTrackr, TimeSource, tinyAVR, UNI/O, Vectron, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

APT, ClockWorks, The Embedded Control Solutions Company, EtherSynch, FlashTec, Hyper Speed Control, HyperLight Load, IntelliMOS, Libero, motorBench, mTouch, Powermite 3, Precision Edge, ProASIC, ProASIC Plus, ProASIC Plus logo, Quiet-Wire, SmartFusion, SyncWorld, Temux, TimeCesium, TimeHub, TimePictra, TimeProvider, Vite, WinPath, and ZL are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, AnyIn, AnyOut, BlueSky, BodyCom, CodeGuard, CryptoAuthentication, CryptoAutomotive, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, EtherGREEN, In-Circuit Serial Programming, ICSP, INICnet, Inter-Chip Connectivity, JitterBlocker, KlearNet, KlearNet logo, memBrain, Mindi, MiWi, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, PowerSmart, PureSilicon, QMatrix, REAL ICE, Ripple Blocker, SAM-ICE, Serial Quad I/O, SMART-I.S., SQI, SuperSwitcher, SuperSwitcher II, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

The Adaptec logo, Frequency on Demand, Silicon Storage Technology, and Symmcom are registered trademarks of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2020, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

ISBN: 978-1-5224-6612-3

Quality Management System

For information regarding Microchip's Quality Management Systems, please visit www.microchip.com/quality.

Worldwide Sales and Service

AMERICAS	ASIA/PACIFIC	ASIA/PACIFIC	EUROPE
<p>Corporate Office 2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-792-7200 Tel: 480-792-7277 Technical Support: www.microchip.com/support Web Address: www.microchip.com</p> <p>Atlanta Duluth, GA Tel: 678-957-9614 Fax: 678-957-1455</p> <p>Austin, TX Tel: 512-257-3370</p> <p>Boston Westborough, MA Tel: 774-760-0087 Fax: 774-760-0088</p> <p>Chicago Itasca, IL Tel: 630-285-0071 Fax: 630-285-0075</p> <p>Dallas Addison, TX Tel: 972-818-7423 Fax: 972-818-2924</p> <p>Detroit Novi, MI Tel: 248-848-4000</p> <p>Houston, TX Tel: 281-894-5983</p> <p>Indianapolis Noblesville, IN Tel: 317-773-8323 Fax: 317-773-5453 Tel: 317-536-2380</p> <p>Los Angeles Mission Viejo, CA Tel: 949-462-9523 Fax: 949-462-9608 Tel: 951-273-7800</p> <p>Raleigh, NC Tel: 919-844-7510</p> <p>New York, NY Tel: 631-435-6000</p> <p>San Jose, CA Tel: 408-735-9110 Tel: 408-436-4270</p> <p>Canada - Toronto Tel: 905-695-1980 Fax: 905-695-2078</p>	<p>Australia - Sydney Tel: 61-2-9868-6733</p> <p>China - Beijing Tel: 86-10-8569-7000</p> <p>China - Chengdu Tel: 86-28-8665-5511</p> <p>China - Chongqing Tel: 86-23-8980-9588</p> <p>China - Dongguan Tel: 86-769-8702-9880</p> <p>China - Guangzhou Tel: 86-20-8755-8029</p> <p>China - Hangzhou Tel: 86-571-8792-8115</p> <p>China - Hong Kong SAR Tel: 852-2943-5100</p> <p>China - Nanjing Tel: 86-25-8473-2460</p> <p>China - Qingdao Tel: 86-532-8502-7355</p> <p>China - Shanghai Tel: 86-21-3326-8000</p> <p>China - Shenyang Tel: 86-24-2334-2829</p> <p>China - Shenzhen Tel: 86-755-8864-2200</p> <p>China - Suzhou Tel: 86-186-6233-1526</p> <p>China - Wuhan Tel: 86-27-5980-5300</p> <p>China - Xian Tel: 86-29-8833-7252</p> <p>China - Xiamen Tel: 86-592-2388138</p> <p>China - Zhuhai Tel: 86-756-3210040</p>	<p>India - Bangalore Tel: 91-80-3090-4444</p> <p>India - New Delhi Tel: 91-11-4160-8631</p> <p>India - Pune Tel: 91-20-4121-0141</p> <p>Japan - Osaka Tel: 81-6-6152-7160</p> <p>Japan - Tokyo Tel: 81-3-6880-3770</p> <p>Korea - Daegu Tel: 82-53-744-4301</p> <p>Korea - Seoul Tel: 82-2-554-7200</p> <p>Malaysia - Kuala Lumpur Tel: 60-3-7651-7906</p> <p>Malaysia - Penang Tel: 60-4-227-8870</p> <p>Philippines - Manila Tel: 63-2-634-9065</p> <p>Singapore Tel: 65-6334-8870</p> <p>Taiwan - Hsin Chu Tel: 886-3-577-8366</p> <p>Taiwan - Kaohsiung Tel: 886-7-213-7830</p> <p>Taiwan - Taipei Tel: 886-2-2508-8600</p> <p>Thailand - Bangkok Tel: 66-2-694-1351</p> <p>Vietnam - Ho Chi Minh Tel: 84-28-5448-2100</p>	<p>Austria - Wels Tel: 43-7242-2244-39 Fax: 43-7242-2244-393</p> <p>Denmark - Copenhagen Tel: 45-4485-5910 Fax: 45-4485-2829</p> <p>Finland - Espoo Tel: 358-9-4520-820</p> <p>France - Paris Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79</p> <p>Germany - Garching Tel: 49-8931-9700</p> <p>Germany - Haan Tel: 49-2129-3766400</p> <p>Germany - Heilbronn Tel: 49-7131-72400</p> <p>Germany - Karlsruhe Tel: 49-721-625370</p> <p>Germany - Munich Tel: 49-89-627-144-0 Fax: 49-89-627-144-44</p> <p>Germany - Rosenheim Tel: 49-8031-354-560</p> <p>Israel - Ra'anana Tel: 972-9-744-7705</p> <p>Italy - Milan Tel: 39-0331-742611 Fax: 39-0331-466781</p> <p>Italy - Padova Tel: 39-049-7625286</p> <p>Netherlands - Druen Tel: 31-416-690399 Fax: 31-416-690340</p> <p>Norway - Trondheim Tel: 47-72884388</p> <p>Poland - Warsaw Tel: 48-22-3325737</p> <p>Romania - Bucharest Tel: 40-21-407-87-50</p> <p>Spain - Madrid Tel: 34-91-708-08-90 Fax: 34-91-708-08-91</p> <p>Sweden - Gothenberg Tel: 46-31-704-60-40</p> <p>Sweden - Stockholm Tel: 46-8-5090-4654</p> <p>UK - Wokingham Tel: 44-118-921-5800 Fax: 44-118-921-5820</p>